

Gateway®



User Guide

Gateway M275 Notebook

Contents

1 Getting Help	1
Gateway Web site	3
Using eSupport	3
Help and Support	5
Searching for a topic	6
Using Your Tablet PC guide	6
Online help	7
2 Checking Out Your Gateway Convertible Tablet PC.....	9
Front	10
Left Side	11
Right Side	13
Back	14
Bottom	15
Keyboard area	16
Identifying your model	18
Gateway model number	18
Gateway serial number	19
Internal wireless label	19
Microsoft Certificate of Authenticity	19
Finding your specifications	20
Accessories	21
3 Getting Started	23
Connecting the AC adapter	24
Protecting from power source problems	26
Starting your convertible tablet PC	26
Turning on the Power on Lid Lift feature	28
Waking up your convertible tablet PC	28
Turning off your convertible tablet PC	29
Restarting (rebooting) your convertible tablet PC	30
Status indicators	31
LED status indicators	31
Keyboard status indicators	33
Using the keyboard	34
Key types	35
System key combinations	36
Buttons	38

Tablet control buttons	38
Multi-function buttons	40
Using the EZ Pad touchpad	41
Using the touchpad	42
Using the display	44
Converting the display from notebook to tablet mode	45
Changing display orientation	46
Adjusting brightness	47
Using the pen	48
Storing and removing the pen	48
Using Your Tablet PC guide	50
Adjusting the volume	50
Turning your wireless network on or off	51
4 Using Drives and Ports	53
Changing modules	54
Using the DVD drive	56
Identifying drive types	56
Inserting a CD or DVD	57
Playing a CD	58
Playing a DVD	58
Creating CDs and DVDs	59
Using the memory card reader	59
Memory card types	59
Using a memory card	60
Adding and removing a PC Card	61
Viewing the display on a projector or monitor	63
Viewing the display on a television	65
Changing from one display to another	67
5 Managing Power	69
Monitoring the battery charge	70
Recharging the battery	71
Recalibrating the battery	72
Changing batteries	73
Replacing the battery	74
Extending battery life	76
Conserving battery power	76
Using alternate power sources	77
Changing power modes	77

6 Upgrading Your Convertible Tablet PC	79
Preventing static electricity discharge	80
Adding or replacing memory	81
Adding or replacing memory in the memory bay	82
Replacing memory under the keyboard	85
Replacing the hard drive kit	93
7 Using the Optional Port Replicator	97
Front	98
Left side	99
Back	100
Connecting to the port replicator	102
Attaching to the port replicator	102
Disconnecting from the port replicator	103
Securing your port replicator	104
8 Maintaining Your Convertible Tablet PC	105
Caring for your convertible tablet PC	106
Display screen	107
Pen	107
Replacing the pen point	108
Cleaning your convertible tablet PC	109
Cleaning the exterior	109
Cleaning the keyboard	110
Cleaning the convertible tablet PC screen	110
Cleaning CDs or DVDs	110
Protecting your convertible tablet PC from viruses	111
Updating Windows	114
Restoring your system	114
9 Troubleshooting	115
Safety guidelines	116
First steps	117
Troubleshooting	118
Audio	118
Battery	118
CD drives	118
Device installation	118
Display	119
DVD drives	120
File management	122

Hard drive	123
Internet	124
Keyboard	125
Memory	126
Memory card reader	127
Modem (dial-up)	127
Mouse	131
Networks	131
Passwords	132
PC Cards	132
Pen	132
Power	133
Printer	133
Sound	135
Touchpad	136
Video	136
Telephone support	137
Before calling Gateway Customer Care	137
Telephone numbers	138
A Safety, Regulatory, and Legal Information	139
Index	151

Chapter 1

Getting Help



- Using the Gateway Web site
- Using Help and Support
- Using Your Tablet PC guide
- Using online help

Thank you for purchasing our convertible tablet PC!

You have made an excellent decision choosing Gateway. We are sure that you will be pleased with the outstanding quality, reliability, and performance of your new convertible tablet PC. Each and every Gateway convertible tablet PC uses the latest technology and passes through the most stringent quality control tests to ensure that you are provided with the best product possible.

Your new Gateway convertible tablet PC is designed to provide an exceptional balance of performance and portability. Your convertible tablet PC uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Please read this manual carefully to familiarize yourself with our range of services and support. We have highlighted some basic care and safety information to help you keep your convertible tablet PC in good operating condition.

Gateway stands behind our value proposition to our customers — to provide best-of-class service and support in addition to high-quality, brand-name components at affordable prices. If you ever have a problem, our knowledgeable, dedicated customer service department will provide you with fast, considerate service.

We sincerely hope that you will receive the utmost satisfaction and enjoyment from your new Gateway convertible tablet PC for years to come.

Thank you again, from all of us at Gateway.

Gateway Web site

Gateway's online support is available 24 hours per day, 7 days per week and provides the most current drivers, product specifications, tutorials, and personalized information about your convertible tablet PC. Visit the Gateway eSupport Web site at support.gateway.com.



Using eSupport

The eSupport site is divided into five major areas:

- Support Home
- Product Support
- Downloads
- Contact Us
- PC Tools

Support Home

Tap or click **Support Home**, then tap or click **All Support Documents** to access product documentation, specifications, and guides. You can also browse through the reference area to locate an article specific to the question you have.

Tap or click **Support Home**, then tap or click **General Tutorials** to access an extensive library of how-to articles and videos on topics, such as making audio CDs and installing a hard drive.

Product Support

Tap or click **Product Support** to view a list of all the products that Gateway supports.

Downloads

Tap or click **Downloads**, then tap or click **My Downloads** to get the latest software updates for BIOS and driver upgrades. By entering your serial number you get drivers specific to your convertible tablet PC. Tap or click **All Downloads** to walk through a step-by-step wizard to locate your drivers.

Contact Us

Tap or click **Contact Us** to access links to customer care with a live technician, including chat and e-mail. Tap or click **Call Us** to get a list of Gateway telephone numbers for both sales and support. For more information, see “[Telephone support](#)” on page 137.

PC Tools


Tap or click **PC Tools** to access utilities to help you manage your convertible tablet PC.

Help and Support

Your convertible tablet PC includes *Help and Support*, an easily accessible collection of help information, troubleshooters, and automated support. Use Help and Support to answer questions about Windows and to help you quickly discover and use the many features of your Gateway convertible tablet PC.

To start Help and Support:

- Tap or click **Start**, then tap or click **Help and Support**. Help and Support opens.

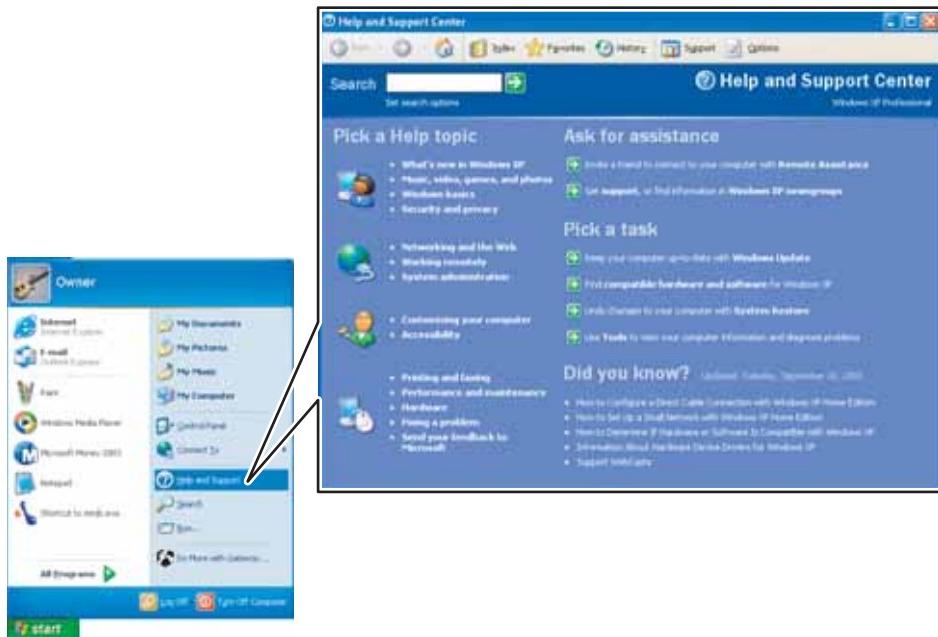

You can find help information by tapping or clicking a link, performing a search, or browsing the index.

Searching for a topic

To search for a topic in Help and Support, type a word or phrase (keyword) in the **Search** box located at the top of any Help and Support screen, then tap or click the arrow  button.

For each search, you receive the following search result types:

- Suggested Topics - These topics are located in Help and Support and are relevant to your search topic.
- Full-text Search Matches - These topics are located in Help and Support and contain the words you entered in the **Search** box.
- Microsoft Knowledge Base - These topics are located on the Microsoft Web site and contain the words you entered in the **Search** box. You must be connected to the Internet to search for and access these topics.

To view a list of your search results, tap or click the results header for the type of results you want to view.

To view a topic, tap or click the topic name in the **Search Results** list.

Using Your Tablet PC guide

In addition to this guide, the *Using Your Tablet PC* guide has been included on your hard drive. This guide includes information on using Windows, using the Internet, sending a fax, and changing power-saving settings as well as other topics.



To access the Using Your Tablet PC guide:

- Tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.



Online help

Many programs provide information online so you can research a topic or learn how to perform a task while you are using the program. You can access most online help information by selecting a topic from a **Help** menu or by tapping or clicking a **Help** button.



You can search for information by viewing the help contents, checking the index, searching for a topic or keyword, or browsing through the online help.




Chapter 2

Checking Out Your Gateway Convertible Tablet PC




- Identifying features
- Locating your convertible tablet PC's model and serial number
- Locating the Microsoft Certificate of Authenticity
- Locating the specifications for your convertible tablet PC
- Purchasing accessories

Front

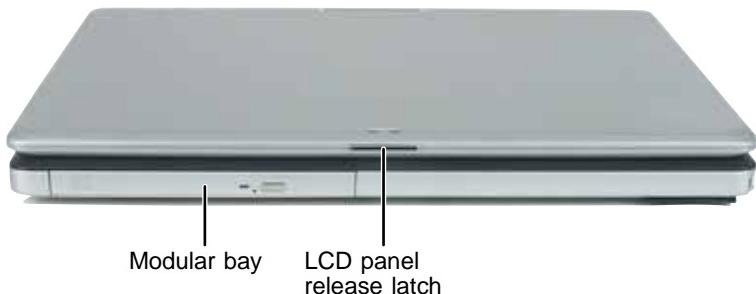

Component	Description
Modular bay	<p>Use this bay for a DVD drive, combination DVD/CD-RW drive, or recordable DVD drive. For more information, see "Changing modules" on page 54.</p> <p>To determine the type of drive in the modular bay, examine the drive tray's plastic cover and compare the logo to those listed in "Identifying drive types" on page 56.</p> <p>Important: Your convertible tablet PC may have come with a DVD, combination DVD/CD-RW, or recordable DVD drive. To order a different module, contact Gateway.</p>
LCD panel release latch	Open the LCD panel by pressing the release latch.


Left Side

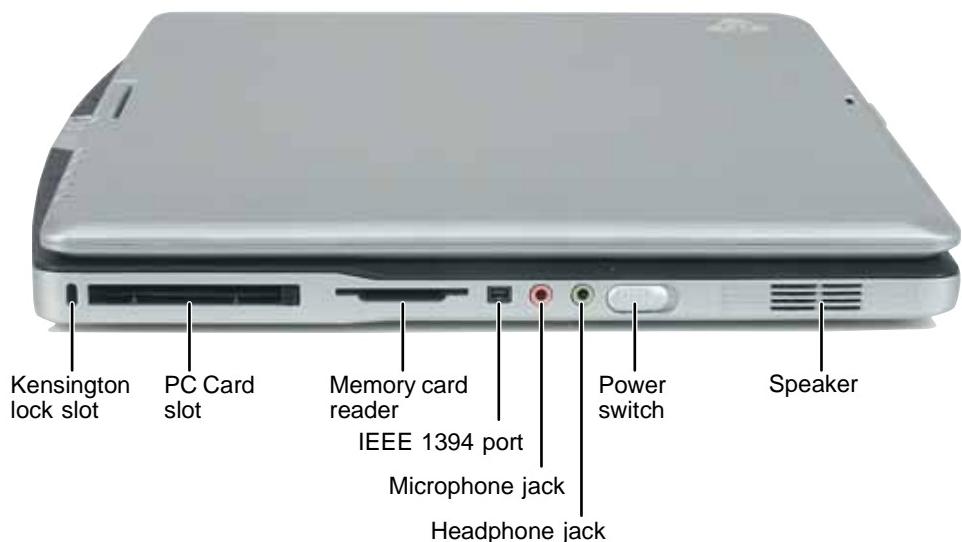

Component	Icon	Description
Kensington™ lock slot		Secure your convertible tablet PC to an object by connecting a Kensington cable lock to this slot.
PC Card slot		Insert one Type II PC Card into this slot. For more information, see “Adding and removing a PC Card” on page 61 .
Memory card reader		Insert a memory card from a digital camera, MP3 player, PDA, or cellular telephone into the memory card reader. For more information, see “Using the memory card reader” on page 59 .
IEEE 1394 port		Plug an IEEE 1394 (also known as Firewire® or i.Link®) device (such as a digital camcorder, Iomega™ Zip™ drive, or MP3 player) into this 4-pin IEEE 1394 port.


Component	Icon	Description
Microphone jack		Plug a microphone into this jack. The built-in microphone is turned off when a microphone is plugged into this jack. For the location of your built-in microphone, see "Keyboard area" on page 16 .
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.
Power switch		Slide to turn the power on or off. You can also configure the power switch for Standby/Resume mode. For more information, see "Starting your convertible tablet PC" on page 26 .
Speaker		Provides audio output when headphones or amplified speakers are not plugged into your convertible tablet PC or port replicator.

Right Side

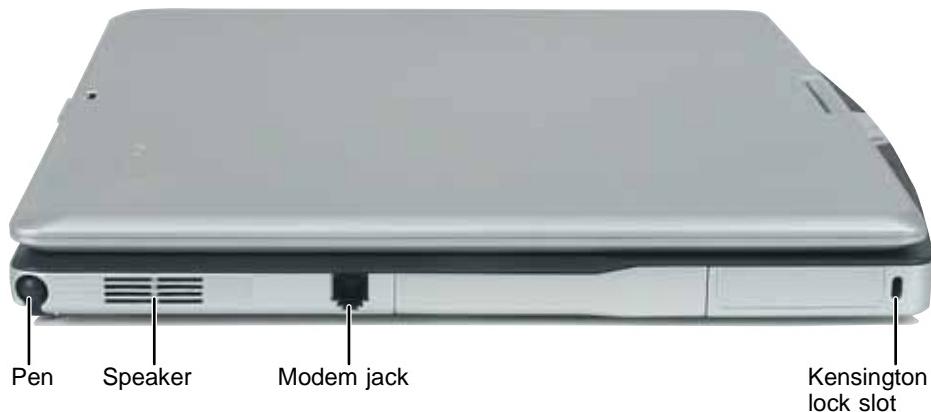

Component	Icon	Description
Pen		Write, tap, and input directly on your convertible tablet PC's display using the cordless pen.
Speaker		Provides audio output when headphones or amplified speakers are not plugged into your convertible tablet PC or port replicator.
Modem jack		Plug a modem cable into this jack.
Kensington™ lock slot		Secure your convertible tablet PC to an object by connecting a Kensington cable lock to this slot.

Back

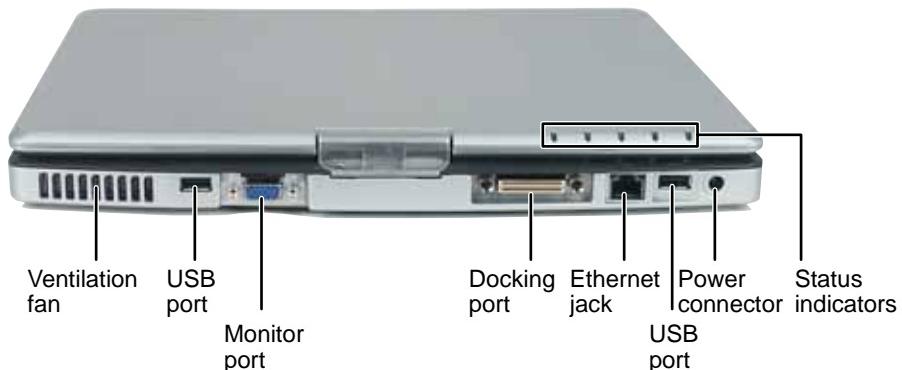

Component	Icon	Description
Ventilation fan		Helps cool internal components. Do not block or insert objects into these slots.
USB ports	● ↗	Plug USB (Universal Serial Bus) devices (such as a diskette drive, flash drive, Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Monitor port	□	Plug an analog VGA monitor or projector into this port. For more information, see "Viewing the display on a projector or monitor" on page 63 .
Docking port	▀▀	Connect the port replicator to this port. Warning! Power is passed through this port. This docking connection is certified to UL 1950 for use only with port replicators designed for your Gateway convertible tablet PC.
Ethernet jack	□□	Plug a 10/100 Ethernet network cable into this jack.
Power connector	—	Plug the AC adapter cable into this connector.
Status indicators		Inform you of the power status or when a drive is in use. For more information, see "LED status indicators" on page 31 .

Bottom



Component	Icon	Description
System label		Includes the product model number. For more information, see "Identifying your model" on page 18 .
Reset hole	⟳	Insert a straightened paper clip into this hole to manually restart your convertible tablet PC.
Memory bay cover		Open this cover to install a memory module. For more information, see "Adding or replacing memory" on page 81 .
Pen latch		Slide to release the pen.
Battery latch	[+]	Slide to release the battery.
Battery bay	[+]	Insert the battery into this bay. For more information, see "Changing batteries" on page 73 .
Hard drive bay	[disk]	The hard drive is located in this bay. For more information, see "Replacing the hard drive kit" on page 93 .

Keyboard area

For information on using your keyboard, see “[Using the keyboard](#)” on page 34.



Component	Icon	Description
Microphone		Record audio through this microphone. The built-in microphone is turned off while an external microphone is connected. For the location of your microphone jack, see “ Left Side ” on page 11 and “ Back ” on page 100.
LED status indicators		Inform you of the power status or when a drive is in use. For more information, see “ LED status indicators ” on page 31.
Tablet control buttons		See “ Tablet control buttons ” on page 38 for a description of each button.

Component	Icon	Description
Keyboard		Provides all the features of a full-sized computer keyboard. For more information, see “ Using the keyboard ” on page 34.
Touchpad		Provides all the functionality of a mouse. For more information, see “ Using the EZ Pad touchpad ” on page 41.
Keyboard Multi-function buttons		Press these buttons to open programs assigned to them. These buttons are set to open your default e-mail program, your default Web browser, online help, and the <i>My Computer</i> window. For more information, see “ Multi-function buttons ” on page 40.
Keyboard Status indicators		Inform you when a button has been pressed that affects how the keyboard is used. For more information, see “ Keyboard status indicators ” on page 33.

Identifying your model


Important



The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

Gateway model number

The label on the bottom of your convertible tablet PC contains information that identifies your convertible tablet PC model and its features. Gateway Technical Support will need this information if you call for assistance.

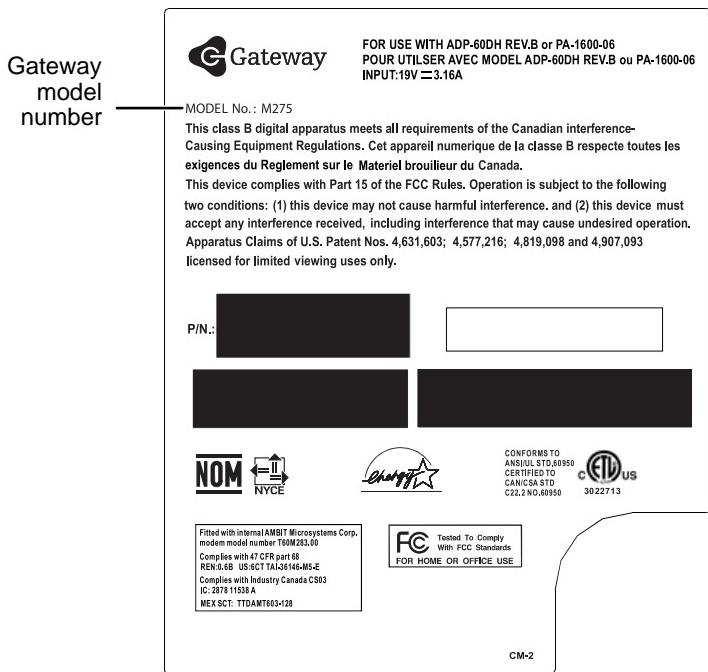


Gateway serial number

You can locate the Gateway serial number:

- Printed on a white sticker on the bottom or back of your convertible tablet PC.
- Printed on the customer invoice that came with your convertible tablet PC. The invoice also contains your customer ID number.

Internal wireless label

A label similar to the following indicates your convertible tablet PC contains a wireless communications device. The label is located on the bottom of your convertible tablet PC.

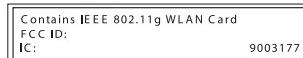

Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the bottom of your convertible tablet PC includes the product key code for your operating system.



Finding your specifications

For more information about your convertible tablet PC, such as memory size, memory type, and hard drive size, visit Gateway's *eSupport* page at support.gateway.com. The *eSupport* page also has links to additional Gateway documentation and detailed specifications. For more information, see "Using eSupport" on page 3.



Accessories

To order accessories, visit the Accessory Store at accessories.gateway.com.

Batteries and automobile/airplane power adapters

If you run your convertible tablet PC on battery power for extended periods, you may want to buy an additional battery so you can swap batteries when necessary. See “[Changing batteries](#)” on page 73 for more information about using an additional battery in your convertible tablet PC.

With an automobile/airplane power adapter, you can save battery power by plugging your convertible tablet PC into an automobile cigarette lighter or an airplane in-flight power receptacle.

Carrying cases

Gateway has large-capacity carrying cases if you need additional space for accessories or supplies.

Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory. See “[Adding or replacing memory](#)” on page 81 for more information.

Peripheral devices

You can attach devices (such as a keyboard, mouse, printer, or monitor) to your convertible tablet PC or port replicator.

Port replicators

Although you can attach devices directly to your convertible tablet PC, a port replicator lets you make all of those connections at one time. When you travel with your convertible tablet PC, you merely disconnect from the port replicator instead of unplugging all the devices.

A port replicator also provides additional ports and other expansion features not included with your convertible tablet PC. See “[Using the Optional Port Replicator](#)” on page 97 for more information about using a port replicator with your convertible tablet PC.

Printers

You can attach almost any type of printer to your convertible tablet PC. The most common types are inkjet and laser printers, which print in color or black and white.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.

USB flash drive

Use a USB flash drive for storing files or transferring files to another computer.

Chapter 3

Getting Started



- Connecting the AC adapter
- Turning your convertible tablet PC on and off
- Using the status indicators, keyboard, buttons, and the EZ Pad touchpad
- Using the display
- Using the pen
- Adjusting the volume

Connecting the AC adapter

You can run your convertible tablet PC using an AC adapter or your convertible tablet PC's battery. The battery was shipped to you partially charged. You should use the AC adapter right away to fully charge the battery. Allow three hours for the battery to fully charge.

Important



If the battery is not fully charged before you use your convertible tablet PC on battery power for the first time, the battery life may be much shorter than you expect. If the battery life seems short even after being charged for three hours, the battery may need to be recalibrated. For information on recalibrating the battery, see “[Recalibrating the battery](#)” on page 72.

To connect the AC adapter:

- 1 Connect the power cord to the AC adapter.



Caution



Make sure that you use the AC adapter that came with your convertible tablet PC or one of the same type purchased from Gateway.

Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your convertible tablet PC may be damaged.

- 2** Connect the AC adapter to your convertible tablet PC's power connector.



- 3** Plug the power cord into a wall outlet.

The battery charge indicator turns on (see “[Status indicators](#)” on [page 31](#) for the location of the battery charge indicator). If the battery charge indicator does not turn on, unplug the adapter from your convertible tablet PC, then plug it back in.

- 4** When you finish using your convertible tablet PC for the first time, turn off your convertible tablet PC and leave your convertible tablet PC connected to AC power until the battery charge indicator turns blue.

Warning



Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.

Important



If the battery charge indicator does not turn blue after three hours, contact Gateway Customer Care at support.gateway.com.



Protecting from power source problems

During a power surge, the voltage level of electricity coming into your convertible tablet PC can increase to far above normal levels and cause data loss or system damage. Protect your convertible tablet PC and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your convertible tablet PC.

Warning



High voltages can enter your convertible tablet PC through both the power cord and the modem connection. To protect your convertible tablet PC and avoid electrical shock, use a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Starting your convertible tablet PC

To start your convertible tablet PC:

- 1 Press the latch on the front of your convertible tablet PC, then lift the LCD panel.

- 2** Slide the power switch located on the left side of your convertible tablet PC.

-OR-

Open the LCD panel. For more information, see “[Turning on the Power on Lid Lift feature](#)” on page 28.



The power switch is preset to On/Off mode. However, you can also set it to function in Standby/Resume mode.

Tips & Tricks



For more information about changing the power switch mode, see “[Changing Power-saving Settings](#)” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

- 3** If you are starting your convertible tablet PC for the first time, follow the on-screen instructions to set up your convertible tablet PC.



Turning on the Power on Lid Lift feature

The Power on Lid Lift feature turns on your convertible tablet PC whenever you open the LCD panel. Your convertible tablet PC was shipped to you with the Power on Lid Lift feature turned off.

To turn on the Power on Lid Lift feature:

- 1 Turn on your convertible tablet PC.
- 2 As soon as it starts and you see a startup screen, press F2. The BIOS Setup utility opens.
- 3 Open the **Advanced** menu.
- 4 Highlight **Wake From Lid**, then select **Enabled** by pressing the spacebar.
- 5 Open the **Exit** menu, then highlight **Exit Saving Changes** and press ENTER.
- 6 Select **Yes**, then press ENTER.



Waking up your convertible tablet PC

When you have not used your convertible tablet PC for several minutes or if you close the LCD panel without turning off your convertible tablet PC, it may enter a power-saving mode called *Standby*. While in Standby, the power indicator flashes.

If your convertible tablet PC is in Standby mode, slide the power switch to “wake” it up.

Tips & Tricks



For more information about changing the power switch mode, see “Changing Power-saving Settings” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

Turning off your convertible tablet PC



To turn off your convertible tablet PC:

- 1 Tap or click **Start**, then tap or click **Turn Off Computer**. The *Turn Off Computer* dialog box opens.
- 2 Tap or click **Turn Off**. Windows shuts down and turns off your convertible tablet PC.

Important



If for some reason you cannot use the Turn Off Computer option in Windows to turn off your convertible tablet PC, slide and hold the power switch for about five seconds, then release it.



Restarting (rebooting) your convertible tablet PC

If your convertible tablet PC does not respond to keyboard or touchpad input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your convertible tablet PC to normal operation, you may have to restart (reboot) your convertible tablet PC.

To close unresponsive programs and restart your convertible tablet PC:

- 1 Press the Windows Security button . The *Windows Security* dialog box opens. For more information, see “[Tablet control buttons](#)” on [page 38](#).
- OR-
- Press **CTRL+ALT+DEL**. The *Windows Security* dialog box opens.
- 2 Tap or click **Task Manager**. The *Windows Task Manager* dialog box opens.
- 3 Tap or click the program that is not responding.
- 4 Tap or click **End Task**.
- 5 Tap or click **X** in the top-right corner of the *Windows Task Manager* dialog box.
- 6 If your convertible tablet PC does not respond, turn it off, wait ten seconds, then turn it on again.

Important



If your convertible tablet PC does not turn off immediately, complete the following steps until your convertible tablet PC turns off:

- 1 Slide and hold the power switch for about five seconds, then release it.
- 2 Insert a straightened paper clip into the reset hole on the bottom of your convertible tablet PC.
- 3 Unplug the power cord and remove the battery for more than 10 seconds.


As a part of the regular startup process, a program to check the disk status runs automatically. When the checks are finished, Windows starts.



Status indicators

LED status indicators

LED status indicators inform you when a drive is being used or indicate the power status of your convertible tablet PC.

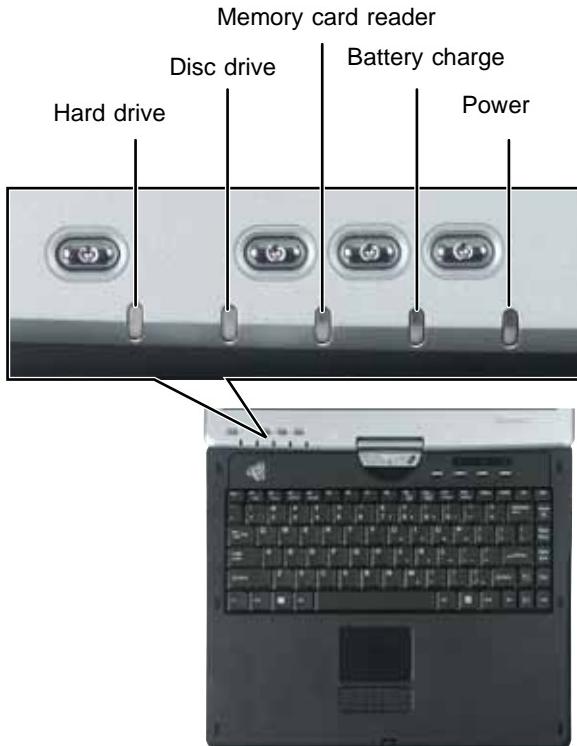

Indicator	Icon	Description
Hard drive		The hard drive is in use.
Disc drive		The DVD, DVD/CD-RW, or recordable DVD drive is in use.
Memory card reader		The memory card reader is in use.
Battery charge		<p>The LED shows the battery activity and status.</p> <ul style="list-style-type: none">▪ LED blue - battery is fully charged.▪ LED purple - battery is charging.▪ LED blinking red - battery charge is very low.▪ LED solid red - battery is malfunctioning. <p>This LED only lights up when your convertible tablet PC is connected to AC power or the battery charge is very low.</p>
Power		<p>The LED shows your convertible tablet PC's power status.</p> <ul style="list-style-type: none">▪ LED on - convertible tablet PC is on.▪ LED blinking - convertible tablet PC is in Standby mode.▪ LED off - convertible tablet PC is off.

Keyboard status indicators

Keyboard status indicators inform you when a button has been pressed that affects how the keyboard is used.



Indicator	Icon	Description
Caps Lock		Caps Lock is turned on.
Scroll Lock		Scroll Lock is turned on. For more information, see “System key combinations” on page 36.
Pad Lock		Numeric keypad is turned on.

Using the keyboard

Your convertible tablet PC features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Num Lock keys for the numeric keypad.

You can attach an external keyboard to the convertible tablet PC using a USB port. You do not need to shut down the convertible tablet PC to connect a USB keyboard. You can also attach an external keyboard to your optional port replicator using a USB or PS/2 port.



Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled F1 to F12 to perform actions in programs. For example, pressing F1 may open help. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the FN key to perform specific actions. For more information, see “ System key combinations ” on page 36.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Volume keys		Press these colored keys in combination with the FN key to increase or decrease the volume or to turn off all sound.
FN key		Press the FN key in combination with a colored system key (such as STATUS, STANDBY, or PAUSE) to perform a specific action.
Windows key		Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Explorer utility).
Application key		Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.
LCD brightness keys		Press these colored keys in combination with the FN key to control the screen brightness.

System key combinations

When you press the FN key and a system key at the same time, your convertible tablet PC performs the action identified by the colored text or icon on the key.

Press and hold FN, then
press this system key...

To...

F2
Status

Display the power status box in the upper-left corner of your display. The box shows the battery charge level, the BIOS version, and whether the AC adapter is being used. Press the key combination again to close this box.

F3
LCD/CRT

Toggle your convertible tablet PC's display between the LCD, an external monitor, or both displays at the same time. A monitor must be plugged into the monitor port on your convertible tablet PC.

F4
Standby

Enter Standby mode. Slide the power switch to leave Standby mode. For more information, see “[Changing power modes](#)” on page 77.

F7
Wireless

Turn the wireless network on or off.

F8
Bright

Increase the LCD panel brightness above the normal brightest setting for 255 seconds. Use this feature in bright lighting situations, such as outside in bright sunlight.

Press a second time to decrease the brightness below the normal dimmest setting. Use this feature in dim lighting situations.

Press a third time to return the display to the normal brightness setting.

Important: Using this feature will affect battery performance.

For more information, see “[XtraBright/XtraDim](#)” on page 47.

Press and hold FN, then
press this system key...

To...



Turn on Pad Lock so you can use the numeric keypad. Press this key combination again to turn off Pad Lock. The Pad Lock status indicator appears when this function is turned on.



Pause the text scrolling in a DOS screen. Press this key combination again to continue scrolling. The Scroll Lock status indicator appears when this function is turned on. (This function is only available in some programs.)



Pause execution of a DOS program. (This function is only available in some programs.)



Stop the currently running DOS program. (This function is only available in some programs.)



Increase the brightness of the display. This key combination overrides the XtraBright/XtraDim setting. For more information, see "[Adjusting brightness](#)" on page 47.



Decrease the brightness of the display. This key combination overrides the XtraBright/XtraDim setting. For more information, see "[Adjusting brightness](#)" on page 47.



Mute the sound. Press the key combination again to restore the sound. For more information, see "[Adjusting the volume](#)" on page 50.



Increase the volume. For more information, see "[Adjusting the volume](#)" on page 50.




Decrease the volume. For more information, see "[Adjusting the volume](#)" on page 50.

Buttons

Tablet control buttons

Press the tablet control buttons to control the convertible tablet PC while it is in tablet mode. The buttons have dimples so that you can press them with your pen.

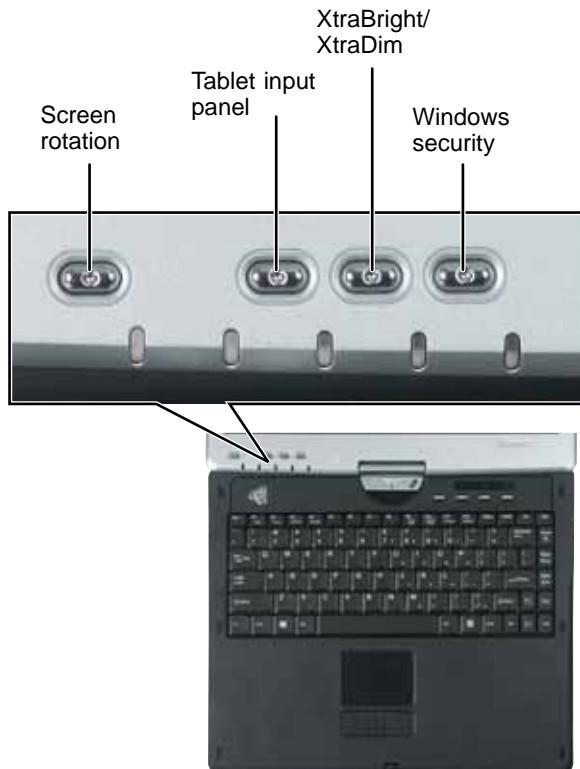


Button	Icon	Press to...
Screen rotation		Rotate the display orientation. For more information, see "Changing display orientation" on page 46 .
Tablet input panel		Open the tablet input panel.

Button	Icon	Press to...
XtraBright/XtraDim		<p>Increase the LCD panel brightness above the normal brightest setting for 255 seconds. Use this feature in bright lighting situations, such as outside in bright sunlight.</p> <p>Press a second time to decrease the brightness below the normal dimmest setting. Use this feature in dim lighting situations.</p> <p>Press a third time to return the display to the normal brightness setting.</p> <p>Important: Using this feature will affect battery performance.</p> <p>For more information, see "XtraBright/XtraDim" on page 47.</p>
Windows security		Open the Windows Task Manager. Also is used for domain authentication or logon screen.

Multi-function buttons


Press the multi-function buttons to open the programs associated with them. The buttons have dimples so that you can press them with your pen.

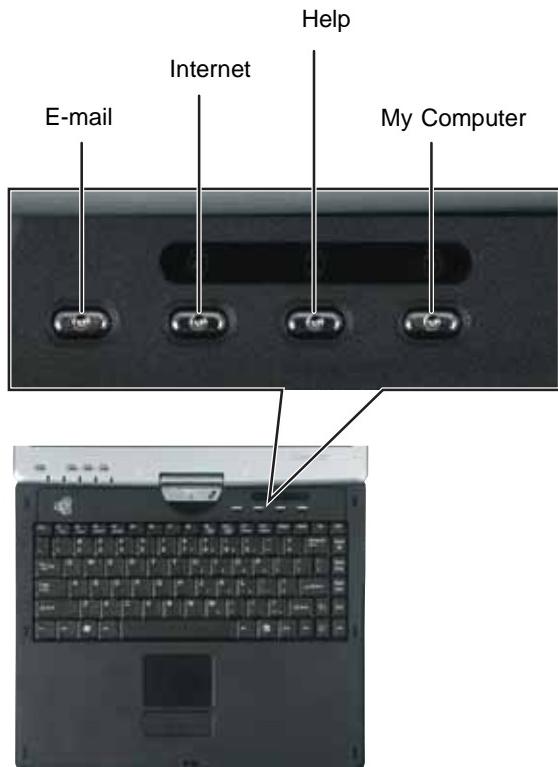


Button	Icon	Press to...
E-mail		Open your default e-mail program.
Internet		Open your default Web browser.
Help		Open online help.
My Computer		Open the <i>My Computer</i> window.

Using the EZ Pad touchpad

The EZ Pad™ consists of a touchpad, two buttons, and a rocker switch.

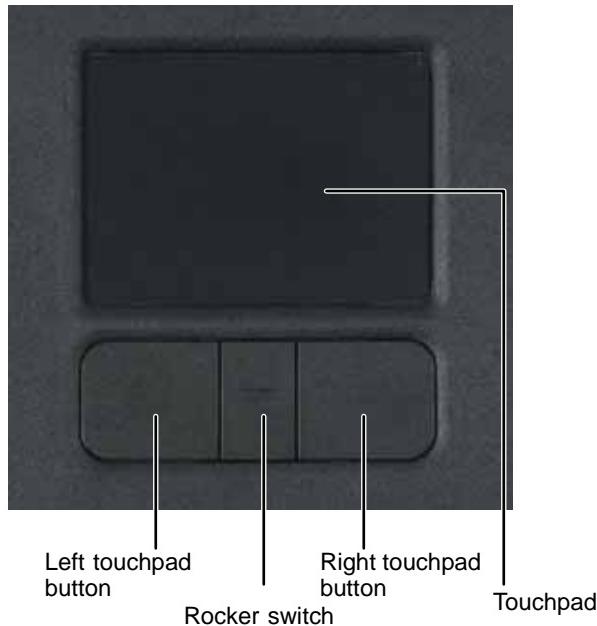

When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction.

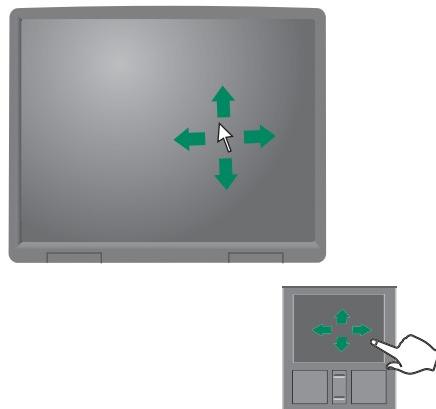

You can use the EZ-Pad *left* and *right* buttons below the touchpad to select objects. You can assign a function to the *rocker switch* between the touchpad buttons. This function can be to scroll up or down, maximize or minimize the active window, or open and close the Start menu.

Tips & Tricks




For instructions on how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other touchpad settings, see “Changing the mouse or touchpad settings” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

Using the touchpad

To...


Do this...

Move the pointer on the screen.

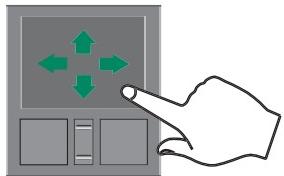

Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.


Select an object on the screen.

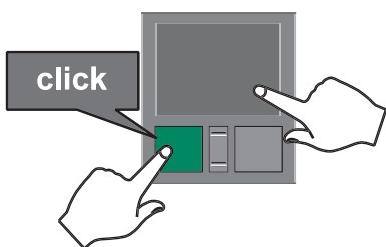

Position the pointer over the object. Quickly press and release the left button once. This action is called *clicking*.


To...**Do this...**

Start a program or open a file or folder.

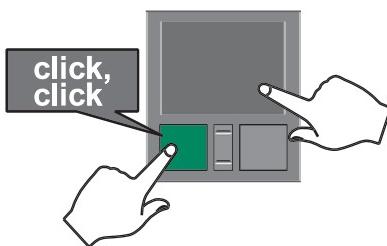


Position the pointer over the object. Press the left button twice in rapid succession. This action is called *double-clicking*.

Access a shortcut menu or find more information about an object on the screen.

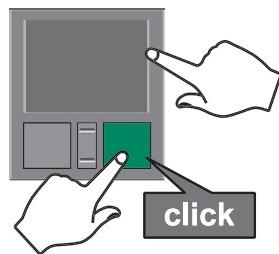

Position the pointer over the object. Quickly press and release the right button once. This action is called *right-clicking*.

Move an object on the screen.

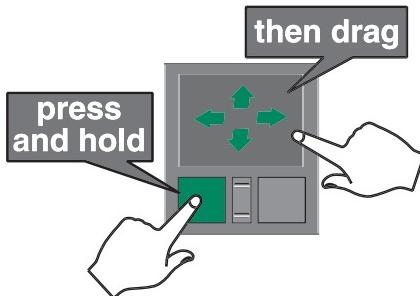

Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Using the display

Your convertible tablet PC's screen combines the eye-soothing readability of a liquid-crystal display with the responsiveness of a pen controller. The screen provides a hard, smooth writing surface, minimizes glare, and increases readability.

- Unlike other touchscreens and PDAs, your convertible tablet PC's display responds only to your convertible tablet PC's pen. Your convertible tablet PC will not respond to a PDA pen or the touch of a fingertip.
- Steady your hand on the display surface while writing. The pressure of your hand or fingers will not affect any open programs.
- Switching from AC to battery power dims the display slightly to save battery power.

Important



If you prefer maximum brightness while on battery power, use the XtraBright/XtraDim button. For more information, see “[Tablet control buttons](#)” on page 38.

Converting the display from notebook to tablet mode

To convert the display from notebook mode to tablet mode:

- 1 Open the LCD panel to the normal viewing position.
- 2 Locate the rotation direction arrow on the LCD panel hinge.



- 3 Rotate the LCD panel in the direction of the rotation direction arrow until the panel is backwards. The panel *soft-locks* into the final position.

- 4 Close the LCD panel onto the keyboard. There is a click when the LCD panel latch locks.



Changing display orientation

You can change the display orientation from the default, landscape (horizontal), to portrait (vertical) or secondary landscape (180 degrees from the default) using the Screen Rotation button. For more information, see “[Tablet control buttons](#)” on page 38.

► To change display orientation:

- Press the Screen Rotation button to step through display orientations.



► To change orientation properties:

- Double-tap or double-click the **Tablet and Pen Settings** icon  in the taskbar, then tap or click the **Display** tab.



Adjusting brightness

To adjust screen brightness:

- Use the increase brightness and decrease brightness keys on the keyboard. For more information, see “[System key combinations](#)” on page 36.



XtraBright/XtraDim

Use XtraBright to increase the LCD panel brightness above the normal brightest setting for 255 seconds. Use this feature in bright lighting situations, such as outside in bright sunlight.

Use XtraDim to decrease the brightness below the normal dimmest setting. Use this feature in dim lighting situations.

To use XtraBright/XtraDim:

- Press the XtraBright/XtraDim button or press FN + F8 on the keyboard to increase the LCD panel brightness above the normal brightest setting for 255 seconds. For more information, see “[Tablet control buttons](#)” on page 38 and “[System key combinations](#)” on page 36.

-OR-

- Press the XtraBright/XtraDim button or press FN + F8 on the keyboard a second time to decrease the brightness below the normal dimmest setting. For more information, see “[Tablet control buttons](#)” on page 38 and “[System key combinations](#)” on page 36.



Using the pen

Your convertible tablet PC's pen is the only device that can write, tap, and input directly on your convertible tablet PC's display.

Caution



A finger-tap or PDA stylus has no effect on your convertible tablet PC's display, and ink pens and other pointed objects could damage the surface. Always use the pen that came with your convertible tablet PC. You can order extra pens from Gateway.

Caution



Do not sharply strike the display. Although the display is durable, it can break.

The pen can do everything a mouse does. Just think "tap" instead of "click".

With a mouse:

With a pen:

Point and click

Point and tap

Double-click

Double-tap

Click-and-drag

Tap-and-drag

Right-click

Button-tap
(press the pen button while tapping or press and hold with the pen)

Storing and removing the pen

To store the pen in your convertible tablet PC:

- 1 Locate the pen holder on the right side of your convertible tablet PC. For more information, see "[Right Side](#)" on page 13.
- 2 Slide the pen into the holder with the pocket clip down until the pen clicks into place.





To remove the pen from our convertible tablet PC:

- 1** Locate the pen latch on the bottom of your convertible tablet PC. For more information, see “Bottom” on page 15.
- 2** Slide the pen latch until the pen is release from the pen holder.



Using Your Tablet PC guide

See the online *Using Your Tablet PC* guide for information about:

- Calibrating your pen
- Using gestures
- Using the pen button
- Using the Tablet Input Panel (TIP)
- Using speech recognition

For more information, see “[Using Your Tablet PC guide](#)” on page 6.

Adjusting the volume

You can use the volume control to adjust the overall volume your convertible tablet PC.

To adjust the overall volume level using hardware controls:

- If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see “[System key combinations](#)” on page 36.



Tips & Tricks



For instructions on how to adjust the volume in Windows, see “*Adjusting the Volume*” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

Turning your wireless network on or off

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11a, IEEE 802.11b, and IEEE 802.11g communication devices are examples of devices that provide wireless communication.

Warning



In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.



To turn wireless networking on or off:

- Press FN + F7.

- OR -

Complete the following steps:

- a Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Network and Internet Connections**. The *Network and Internet Connections* window opens.
- b Tap or click/Double-tap or double-click **Network Connections**. The *Network Connections* window opens.
- c Button tap or right-click **Wireless Network Connection**, then tap or click **Enable** to turn on wireless networking or tap or click **Disable** to turn off wireless networking.



Chapter 4


Using Drives and Ports



- Changing modules
- Using DVD drives
- Using the media card reader
- Using a PC Card
- Viewing the display on a monitor, projector, or television

Changing modules

Your convertible tablet PC's modular bay supports different *bay modules*, such as a DVD or combination DVD/CD-RW drive.

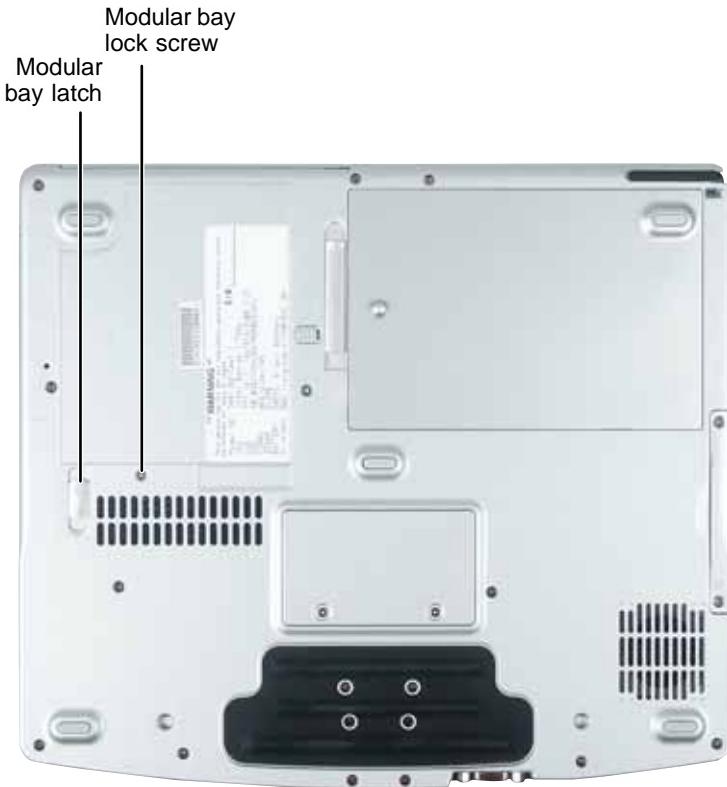

► To change bay modules:

- 1 Make sure that the drive is empty.
- 2 Turn off your convertible tablet PC (do not place it in Standby or Hibernate mode).
- 3 Close the LCD panel.
- 4 Disconnect your convertible tablet PC from the optional port replicator (see “[Disconnecting from the port replicator](#)” on page 103).

- 5 Turn your convertible tablet PC over so the bottom is facing up.
- 6 Remove the module bay lock screw.



- 7 Slide and hold the module bay latch. The module may move out slightly.



- 8 Slide the module out.

- 9 Firmly push the new module straight into the bay until the latch clicks into place.
- 10 Replace the module bay lock screw.



Using the DVD drive

You can use your convertible tablet PC to enjoy a wide variety of multimedia features.

Identifying drive types

Your Gateway convertible tablet PC may contain one of the following drive types. Look on the front of the drive for one or more of the following logos:


If your drive has this logo...	This is your drive type...	Use your drive for...
	DVD drive	Installing programs, playing audio CDs, playing DVDs, and accessing data. You cannot use this drive to create CDs or DVDs.
	Combination DVD/CD-RW drive	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to CD-R or CD-RW discs. You cannot use this drive to create DVDs.
	Recordable DVD Drive	Installing programs, playing audio CDs, playing DVDs, accessing data, recording music and data to recordable CDs, and recording video and data to recordable DVDs.

Tips & Tricks



For more information, see “[Creating CDs and DVDs](#)” on page 59.

Inserting a CD or DVD

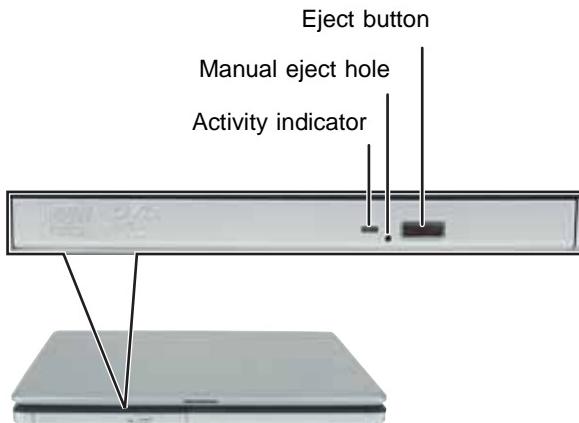**Important**

Some music CDs have copy protection software. You may not be able to play these CDs on your convertible tablet PC.



To insert a CD or DVD:

- 1 Press the eject button on the DVD drive. After the tray opens slightly, pull the disc tray completely open.
- 2 Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.

Important

When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

- 3 Push the tray in until it is closed.



Playing a CD

Use the music program or Windows Media Player on your convertible tablet PC to:

- Play music CDs
- Create MP3 music files from your music CDs
- Edit music track information
- Use your music files to build a music library
- Listen to Internet Radio

Tips & Tricks



For more information about playing CDs, see “Playing CDs” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

Playing a DVD

A Digital Versatile Disc (DVD) is similar to a CD but has greater data capacity. Because of this increased capacity, full-length movies, several albums of music, or several gigabytes of data can fit on a single disc. You can play DVDs with the DVD program or Windows Media Player.

Tips & Tricks



For more information about playing DVDs, see “Playing DVDs” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

Creating CDs and DVDs

You can use the CD and DVD burning program on your notebook to copy tracks from a music CD to your hard drive, copy or create data CDs and DVDs, create music CDs, create video DVDs, and more.

Tips & Tricks



For more information about creating CDs and DVDs, see "Creating CDs and DVDs" in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

Using the memory card reader

You can use memory cards to transfer pictures from a digital camera to your convertible tablet PC. You can also use the memory card reader to transfer data between your convertible tablet PC and a device that uses memory cards, such as a PDA, MP3 player, or cellular telephone.

Memory card types

The memory card reader supports the following card types:

- Memory Stick®
- MultiMediaCard™
- Secure Digital™
- SmartMedia™ (3.3V only)

Using a memory card


To insert a memory card:

- 1 Insert the memory card into the memory card slot with the label facing up and the arrow on the label pointing towards your convertible tablet PC.

Important



Insert the SmartMedia card with the label facing down. Your convertible tablet PC only accepts 3.3V SmartMedia cards.

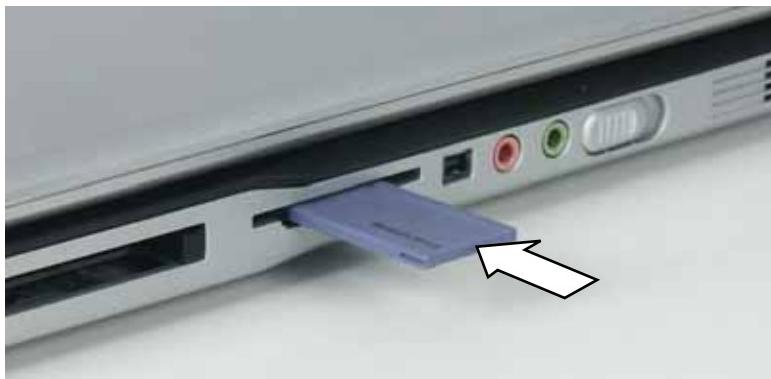

- 2 To access a file on the memory card, tap or click **Start**, then tap or click **My Computer**. Double-tap or double-click the drive letter (for example, the E: drive), then double-tap or double-click the file name.



To remove a memory card:

- Make sure that the memory card reader status indicator (see “[Status indicators](#)” on page 31) is off, then pull the memory card out of the convertible tablet PC. Do not use the remove hardware  icon in the taskbar to remove the memory card. If you use the remove hardware icon, your convertible tablet PC will not recognize the reader until you reboot.



Adding and removing a PC Card

Your convertible tablet PC has a PC Card slot (also known as a PCMCIA card slot). This slot accepts one Type II card.

You do not need to restart your convertible tablet PC when changing most cards because your convertible tablet PC supports *hot-swapping*. Hot-swapping means that you can insert a PC Card while your convertible tablet PC is running. If your PC Card does not work after hot-swapping, see the PC Card manufacturer's documentation for further information.



To insert a PC Card:

- Push the card firmly into the PC Card slot label-side up until the outer edge of the card is flush with the side of your convertible tablet PC.



To remove a PC Card:

- 1 Tap or click the remove hardware icon in the taskbar, the PC Card name, then tap or click **Stop**.

-OR-

Turn off your convertible tablet PC.

Important



If the remove hardware icon does not appear on the taskbar, tap or click the show hidden icons button.

- 2 Release the eject button by pressing the PC Card eject button once.
- 3 Eject the PC Card by pressing the eject button again.



Viewing the display on a projector or monitor


You can use your convertible tablet PC for giving presentations by connecting an external monitor or projector to your monitor (VGA) port. Your convertible tablet PC supports simultaneous LCD and CRT display. Simultaneous display lets you control the presentation from your convertible tablet PC and at the same time face your audience.



To use a projector or external monitor:

- 1** Turn off your convertible tablet PC.
- 2** Plug the projector or monitor cable into the VGA port on your convertible tablet PC or port replicator. For the location of the VGA port, see “[Back](#)” on page 14 and “[Back](#)” on page 100.
- 3** Turn on your convertible tablet PC.
- 4** Plug the projector’s or monitor’s power cord into an AC power source and turn it on. Windows recognizes the new hardware and searches for its driver. You may need to install the driver from the disc supplied by the manufacturer or download the driver from the manufacturer’s Web site.
- 5** After the driver is installed, button-tap or right-click any empty space on the desktop, then tap or click **Properties**. The *Display Properties* dialog box opens.

- 6 Tap or click the **Settings** tab.

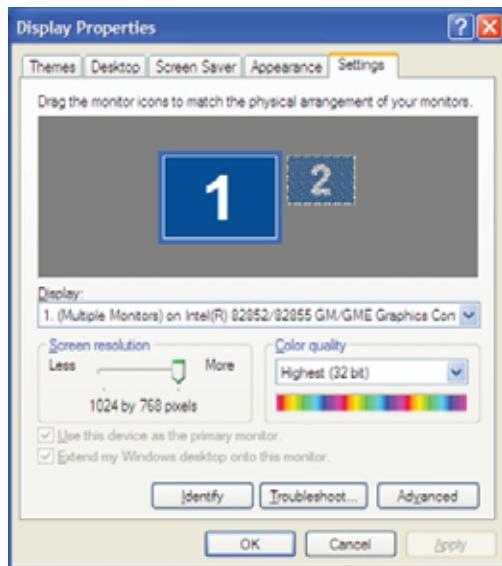

- 7 Button-tap or right-click the second monitor icon (labeled 2), then tap or click **Attached**.
- 8 Tap or click **Apply**.
- 9 Adjust properties such as **Screen Resolution** or **Color Quality** if necessary.
- 10 Tap or click **OK**.



Important



Press FN+F3 to switch between viewing the display on the LCD panel and viewing the display on the projector or monitor.

Important



If an external monitor or projector is connected and you close the LCD panel, your convertible tablet PC may turn off the LCD panel, but will not enter Standby mode.

Viewing the display on a television

The S-Video out jack on your optional port replicator lets you view your convertible tablet PC display on a television screen using a standard S-Video cable.

Important



To turn on external video by default, connect the television (or other external video device) before starting your convertible tablet PC.

Important




Audio is not transmitted through the S-Video out jack. Use the built-in speakers, a set of headphones or external powered speakers, or connect your convertible tablet PC to a stereo system using the S/PDIF jack to hear sound while playing a DVD. DVD playback to a VCR will be scrambled by copyright protection software.



To view your convertible tablet PC display on a television:


- 1 With your convertible tablet PC off, connect one end of a standard S-Video cable to the S-Video out jack on your port replicator. For the location of the S-Video out jack, see “[Back” on 100](#).
- 2 Connect the other end of the cable to the Video in jack on your television or VCR.
- 3 Turn on the television or VCR.
- 4 Start your convertible tablet PC.
- 5 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Appearance and Themes**.
- 6 Tap or click/Double-tap or double-click the **Display** icon. The *Display Properties* dialog box opens.

- 7 Tap or click the **Settings** tab.

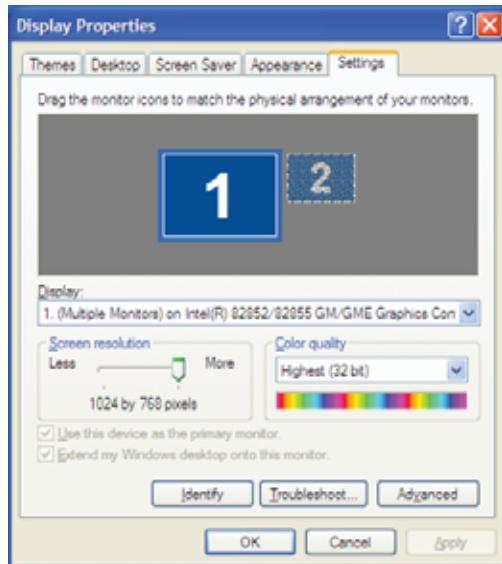

- 8 Tap or click **Advanced**. The *Multiple Monitors and Intel Properties* dialog box opens.
- 9 Tap or click the **Intel Extreme Graphics** tab.
- 10 Tap or click the **Graphics Properties** button. The *Intel Graphics Controller Properties* dialog box opens.

- 11** Tap or click the **Television** button.

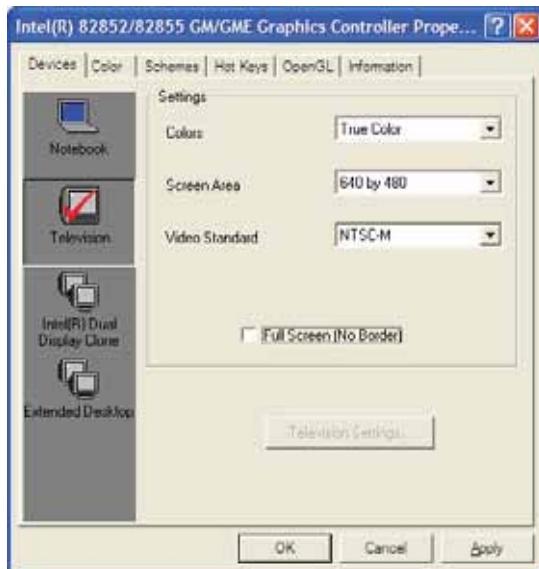

Important



If you are traveling internationally, you may need to change the video standard. For example, many televisions in Asia use PAL instead of NTSC.

- 12** Tap or click **Apply**.



Changing from one display to another

After you have set up the second display on your convertible tablet PC to be a television, you can quickly switch between viewing the display on the LCD panel and viewing it on the television.

To...	Press
Change the display from the LCD panel to the television	CTRL+ALT+F2
Change the display from the television to the LCD panel	CTRL+ALT+F3

Chapter 5

Managing Power



- Checking and recharging the battery
- Recalibrating the battery
- Changing batteries
- Extending the life of the battery

Monitoring the battery charge

Your new Gateway convertible tablet PC is designed to provide an exceptional balance of performance and portability. Your convertible tablet PC uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Closely monitor the battery charge. When the battery charge gets low, change the battery or connect to AC power immediately to prevent losing any unsaved work.

To monitor the battery charge:

- Double-tap or double-click the power cord icon  or battery icon  in the taskbar. The *Power Meter* dialog box opens.

Important



If the power cord or battery icon does not appear on the taskbar, tap or click the show hidden icons  button. If the icon still does not appear, make sure that **Always show icon on the taskbar** is checked on the Power Options Properties Advance tab.

For more information, see “Changing advanced settings” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

- Pressing **FN+STATUS** to view the power status box, which opens in the upper-left corner of the screen. The power status box shows the current power source, the battery charge level, and the power management mode.

- Looking at the battery charge indicator:
 - LED blue - battery is fully charged.
 - LED purple - battery is charging.
 - LED blinking red - battery charge is very low.
 - LED solid red - battery is malfunctioning.

Important

This LED only lights up when the convertible tablet PC is connected to AC power. For the location of the battery charge indicator, see "["Status indicators" on page 31](#).

- Wait for a Low Battery warning message to appear.

If your battery charge indicator displays what looks like an inaccurate charge, you may need to recalibrate the battery. For more information, see "["Recalibrating the battery" on page 72](#).

Recharging the battery

The battery recharges while it is installed and your convertible tablet PC is connected to AC power. While the battery is recharging, the battery charge indicator turns on and the battery icon in the taskbar has a lightning bolt .

Important

If the power cord or battery icon does not appear on the taskbar, tap or click the show hidden icons  button. If the icon still does not appear, make sure that **Always show icon on the taskbar** is checked on the Power Options Properties Advance tab.

For more information, see "Changing advanced settings" in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

Recalibrating the battery

If your convertible tablet PC unexpectedly goes into Standby mode while you are using it but the battery charge is not low, you may need to recalibrate your battery. You should also recalibrate the battery periodically to maintain the accuracy of the battery gauge.

To recalibrate the battery:

- 1 Connect the AC adapter, then turn on your convertible tablet PC.
- 2 As soon as it starts and you see a startup screen, press F2. The BIOS Setup utility opens.
- 3 Open the **Advanced** menu.
- 4 Highlight **Battery Auto Learning**, then select **Enabled** by pressing the spacebar.
- 5 Open the **Exit** menu, then highlight **Exit Saving Changes** and press ENTER.
- 6 Select **Yes**, then press ENTER.

The battery recalibration process begins and a screen opens showing you the progress. The entire process will take several hours.

Important



Do not interrupt the battery recalibration process. If recalibration is interrupted, you must start the process over again.

When the recalibration has finished, the message “Press [Esc] key to exit” appears.

- 7 Press ESC. The battery charge indicator now displays an accurate battery charge. If the battery charge indicator does not show an accurate charge, contact Gateway Technical Support.



Changing batteries

If your convertible tablet PC is connected to AC power, you can change the battery while the convertible tablet PC is turned on.


Warning



Danger of explosion if battery is incorrectly replaced.

Replace only with a battery specifically manufactured for your Gateway convertible tablet PC. Discard used batteries according to the manufacturer's instructions.

The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used battery promptly. Keep away from children.

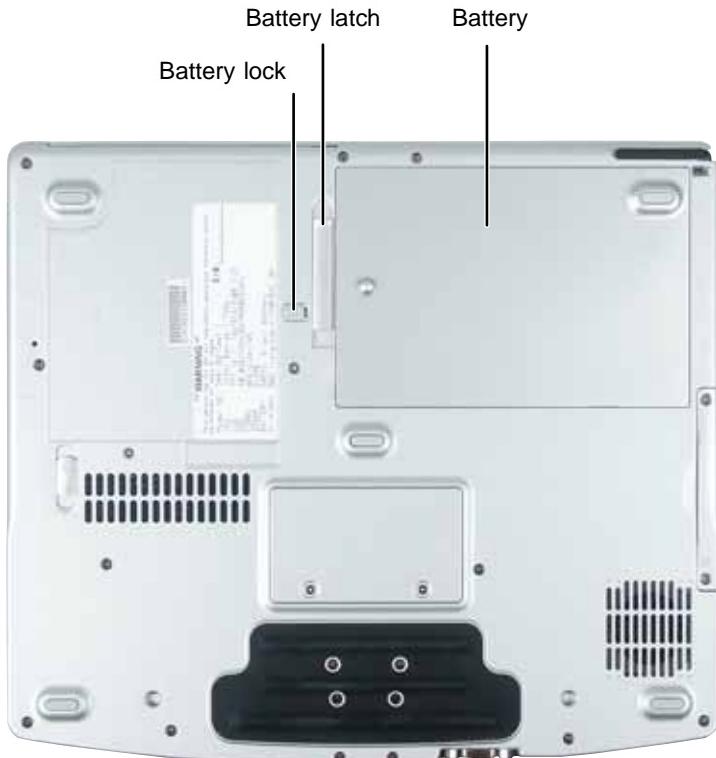

Replacing the battery

To replace the battery:

- 1 If your convertible tablet PC is on and is connected to AC power, go to [Step 2](#).
-OR-
- If your convertible tablet PC is on and is not connected to AC power, save your work and turn off your convertible tablet PC.
- 2 Close the LCD panel.
- 3 Disconnect your convertible tablet PC from the optional port replicator (see [“Disconnecting from the port replicator” on page 103](#)).
- 4 Slide the battery lock to the unlocked position, then slide the battery release latch.



- 5** Lift the battery out of the bay.



- 6** Place a recharged battery into the bay and press down until it snaps into place.
- 7** Slide the battery lock to the locked position.
- 8** Turn your convertible tablet PC over and reattach the optional port replicator.
- 9** Open the LCD panel and slide the power switch.



Extending battery life

Conserving battery power

To conserve power while using the battery to power your convertible tablet PC:

- Dim the display as low as is comfortable. For dim or dark environments, use the XtraBright/XtraDim button to set your display to the dimmest setting possible.
- Remove PC Cards cards when you do not need them. Many PC Cards use a small amount of power while inserted, even if they are not being used.
- Modify the power management settings for maximum power savings.

Tips & Tricks



For more information about using power management settings, see "Changing Power-saving Settings" in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

- Close the LCD panel to turn off the display while you are not using your convertible tablet PC. The display stays off until you open the panel again.
- Use Hibernate mode for maximum power savings while your convertible tablet PC is not in use.

Tips & Tricks



For more information about using Hibernate mode, see "Activating and using Hibernate mode" in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

- Using the DVD or recordable drive only when necessary. These drives use a large amount of power.

- Recharge the battery often, take an extra battery, and fully recharge the batteries before traveling. For more information, see “[Recharging the battery](#)” on page 71 and “[Changing batteries](#)” on page 73.
- Turning off the Power on Lid Lift feature. For more information, see “[Turning on the Power on Lid Lift feature](#)” on page 28.

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- If traveling internationally, take electrical adapters. Save the battery for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.
- If you will have access to an EmPower™ in-flight power receptacle or an automobile cigarette lighter, use a power inverter. Save the battery for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your convertible tablet PC's battery:

- *Standby* - while your convertible tablet PC is in Standby, it switches to a low power state where devices, such as the display and drives, turn off.
- *Hibernate* - (also called *save to disk*) writes all current memory (RAM) information to the hard drive, then turns your convertible tablet PC completely off. The next time you turn on your convertible tablet PC, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode.

Using power saving modes

Always save your work before using Standby mode. In Standby mode, your convertible tablet PC reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

When in Hibernate mode, your convertible tablet PC saves all memory information to the hard drive, then turns the power completely off.

If your convertible tablet PC is...	...and you want to...	...then
On	Enter Standby mode	Press FN+STANDBY .
On	Enter Hibernate mode (must be activated)	Tap or click Start , then tap or click Turn Off Computer . Press and hold SHIFT , then tap or click Hibernate .
In Standby or Hibernate mode	Exit Standby or Hibernate mode	Slide the power switch.

Chapter 6

Upgrading Your Convertible Tablet PC



- Adding and replacing memory
- Replacing the hard drive

Preventing static electricity discharge

Important



Before installing memory or replacing the hard drive, you should read and understand the information in this section.

Warning



To avoid exposure to dangerous electrical voltages and moving parts, turn off your convertible tablet PC and unplug the power cord, modem cable, and network cable before opening the case.

Warning



To prevent risk of electric shock, do not insert any object into the vent holes of the convertible tablet PC.

Before installing memory or replacing the hard drive, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.
- Touch a bare metal surface on your workbench or other grounded object.

Adding or replacing memory

Your convertible tablet PC uses memory modules called SO-DIMMs (Small Outline Dual Inline Memory Modules). The modules are available in various capacities and any module can be placed in the memory bay. Use only memory modules designed for the Gateway M275 for upgrading your memory.

SO-DIMMs are located in two places inside your convertible tablet PC. Both SO-DIMMs can be upgraded. For instructions on upgrading the SO-DIMM located on the bottom of your convertible tablet PC, see [“Adding or replacing memory in the memory bay” on page 82](#). For instructions on upgrading the SO-DIMM located under the keyboard of your convertible tablet PC, see [“Adding or replacing memory” on page 81](#).

Adding or replacing memory in the memory bay

Important



Use only memory modules designed for the Gateway M275.




To add or replace memory modules:

- 1 Follow the guidelines under “[Preventing static electricity discharge](#)” [on page 80](#).
- 2 Turn off your convertible tablet PC.
- 3 Disconnect the AC adapter, modem cable, and network cable.
- 4 Disconnect all peripheral devices and remove any PC cards.
- 5 Disconnect your convertible tablet PC from the optional port replicator (see “[Disconnecting from the port replicator](#)” [on page 103](#)).


- 6** Turn your convertible tablet PC over so the bottom is facing up.
- 7** Remove the battery. For more information, see “[Changing batteries](#)” on page 73.
- 8** Loosen the two memory bay cover screws, then remove the memory bay cover.



- 9** If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.

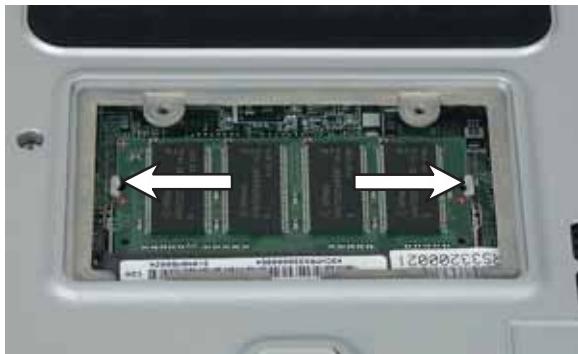

- 10** Pull the memory module out of the slot.

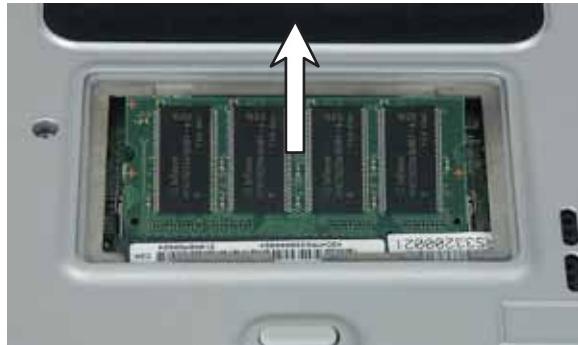

- 11** Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.

Important



Use only memory modules designed for the Gateway M275.

- 12** Gently push the module down until it clicks in place.
- 13** Replace the memory bay cover and tighten the cover screws.
- 14** Insert the batteries, then turn your convertible tablet PC over.
- 15** Reattach the optional port replicator.
- 16** Connect the power adapter, modem cable, and network cable, then turn on your convertible tablet PC.



Replacing memory under the keyboard

Important



Use only memory modules designed for the Gateway M275 for upgrading your memory.

Installing replacement memory under the keyboard is a process consisting of three procedures that must be done in sequence:

- 1** Open the keyboard compartment.
- 2** Replace the memory.
- 3** Reattach the keyboard.

Opening the keyboard compartment



To open the keyboard compartment:

- 1** Follow the guidelines under “[Preventing static electricity discharge](#)” [on page 80](#).
- 2** Turn off your convertible tablet PC.
- 3** Disconnect the AC adapter, modem cable, and network cable.
- 4** Disconnect all peripheral devices and remove any PC cards.
- 5** Disconnect your convertible tablet PC from the optional port replicator (see “[Disconnecting from the port replicator](#)” [on page 103](#)).
- 6** Turn your convertible tablet PC over so the bottom is facing up.
- 7** Remove the battery. For more information, see “[Changing batteries](#)” [on page 73](#).

- 8** Remove the two keyboard screws marked with a K.



- 9** Turn your convertible tablet PC over so the top is facing up.
10 Open the LCD panel to the normal viewing position.

- 11** Insert the small flat-blade screwdriver under the bottom of the keyboard bezel between the F11 and F12 keys and gently pry it up.

Important



Inserting a piece of cloth between the screwdriver and keyboard will help prevent damage to your convertible tablet PC.



- 12** Remove the bezel from your convertible tablet PC by pulling the bezel toward you and at the same time lifting its front to clear the keyboard. You will hear small snapping sounds as the bezel comes away from your convertible tablet PC. Be careful not to break off the tabs found on the bottom of the bezel.



- 13** With a small Phillips screwdriver, remove the four keyboard screws and put them in a safe place.



- 14** Lift the back edge of the keyboard, then slowly rotate it toward you so it lies **keys-down** on top of your convertible tablet PC. Be careful not to damage the LCD panel, or unplug the keyboard ribbon cable.



Replacing the memory

To replace the memory:

- 1 Gently press outward on the clip at each end of the memory module until the module tilts upward.



- 2 Pull the memory module out of the slot.



- 3 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.

Important



Use only memory modules designed for the Gateway M275.

- 4 Gently push the module down until it clicks in place.



Reattaching the keyboard



To reattach the keyboard:


- 1 Rotate the keyboard toward the LCD panel until the keyboard is almost face-up.
- 2 Insert the tabs on the front of the keyboard under the palm rest.



- 3** Gently press the keyboard down until it is flat all the way across. The keyboard should easily fall into place. Be careful not to damage the LCD panel.
- 4** Replace the four keyboard screws.



- 5** Slide the tabs on the bottom side of the bezel under your convertible tablet PC frame.

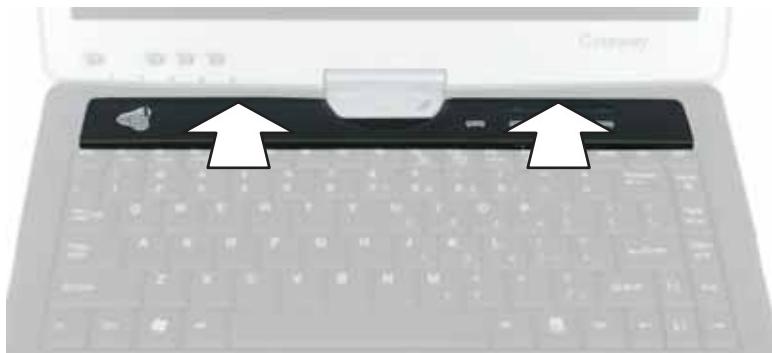

- 6** Press down on the bezel in several places to make sure it is correctly mounted. The bezel is correctly mounted when you can run your finger along the bezel and find no loose spots. The bezel should be flat all the way across.

Warning



If the bezel is not correctly replaced, your convertible tablet PC could be damaged when you try to close the LCD panel.

- 7** Turn your convertible tablet PC over so the bottom is facing up.
- 8** Replace the two keyboard screws.
- 9** Insert the batteries, then turn your convertible tablet PC over.
- 10** Reattach the optional port replicator.
- 11** Connect the power adapter and modem and network cables, then turn on your convertible tablet PC.




Replacing the hard drive kit

If you would like more hard drive capacity, you can replace your original drive with a higher-capacity drive.



To replace the hard drive kit:

- 1 Back up any data you want to transfer to the new hard drive. For more information, see “Backing up files” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.
- 2 Follow the guidelines under “[Preventing static electricity discharge](#)” on page 80.
- 3 Turn off your convertible tablet PC.
- 4 Disconnect the AC adapter, modem cable, and network cable.
- 5 Disconnect all peripheral devices and remove any PC cards.
- 6 Disconnect your convertible tablet PC from the optional port replicator (see “[Disconnecting from the port replicator](#)” on page 103).
- 7 Turn your convertible tablet PC over so the bottom is facing up.
- 8 Remove the battery. For more information, see “[Changing batteries](#)” on page 73.
- 9 Remove the two hard drive kit screws.

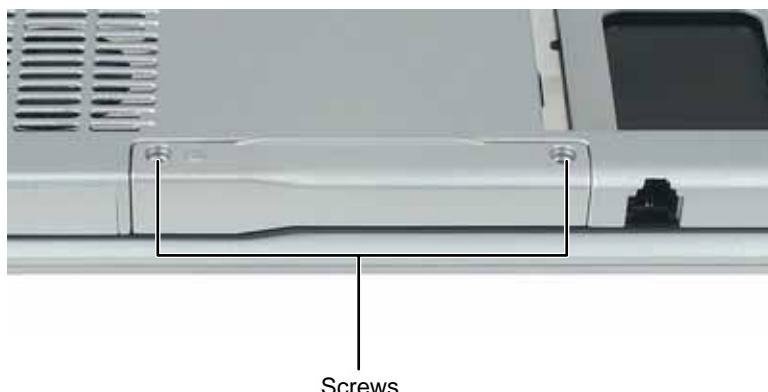


Tips & Tricks



Use a magnetic screwdriver or turn your convertible tablet PC over to remove the screws.

- 10** Slide the old hard drive kit out of your convertible tablet PC.

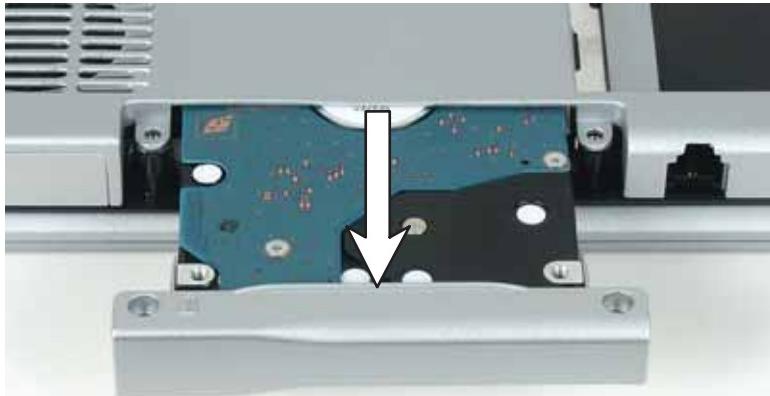

- 11** If your new hard drive already includes the hard drive kit bracket, go to [Step 16](#).

-OR-

If you need to move the hard drive kit bracket from your old hard drive kit to your new hard drive, go to [Step 12](#).

- 12** Remove the two screws that secure the hard drive to the hard drive kit bracket.



- 13** Remove the bracket from the old drive.
- 14** Insert the new drive into the bracket so the screw holes line up.
- 15** Replace the two screws that secure the bracket to the drive.
- 16** Place the new hard drive kit into the bay and slide it into the connector.
- 17** Replace the screws that secure the hard drive kit to your convertible tablet PC.
- 18** Insert the batteries, then turn your convertible tablet PC over.
- 19** Reattach the optional port replicator.
- 20** For instructions on installing Windows, your drivers, and your applications, see the instructions that were included with the restore discs.



Chapter 7

Using the Optional Port Replicator



- Identifying features
- Connecting and disconnecting the port replicator
- Securing the port replicator with a locking cable

Front




Component	Icon	Description
Kensington™ lock ring		Secure your convertible tablet PC and port replicator to an object by connecting a Kensington cable lock through this ring and into the Kensington lock slot on your convertible tablet PC. For more information, see “Securing your port replicator” on page 104.
Docking port		Connect your convertible tablet PC to this port. Warning! Power is passed through this port. This docking connection is certified to UL 1950 for use only with convertible tablet PCs designed for your Gateway port replicator.
Docking release latch		Press the release latch to attach the convertible tablet PC. Lift the release latch to release your convertible tablet PC.

Left side



Component	Icon	Description
USB port		Plug USB (Universal Serial Bus) devices (such as a diskette drive, flash drive, Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into this port.

Back

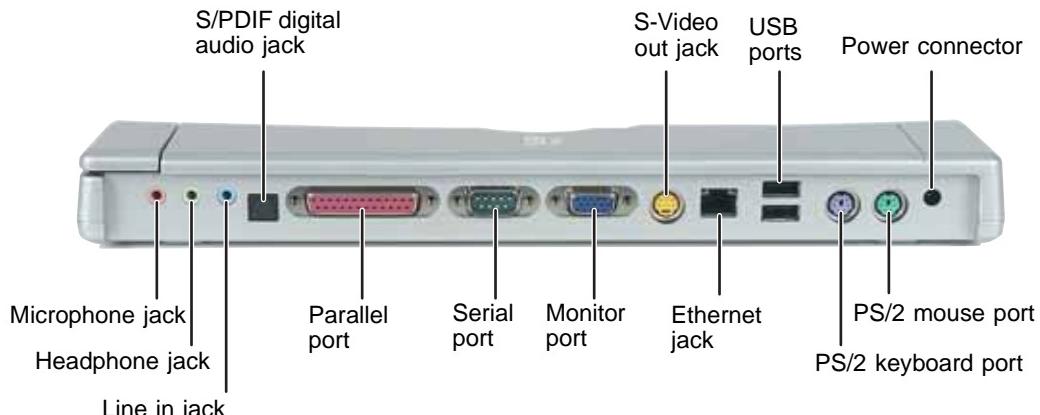

Component	Icon	Description
S/PDIF digital audio jack		Plug an optical (Toslink) AC-3 digital audio cable into this jack.
S-Video out jack		Plug a standard S-Video cable into this jack and the jack on an S-Video device (such as a television or VCR). For more information, see “Viewing the display on a television” on page 65 .
USB ports		Plug USB (Universal Serial Bus) devices (such as a USB Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Power connector		Plug the AC adapter cable into this connector.
Microphone jack		Plug a microphone into this jack.
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers on your convertible tablet PC are turned off when speakers or headphones are plugged into this jack. This jack is turned off when headphones are plugged into your convertible tablet PC's headphone jack.

Component	Icon	Description
Line in jack		Connect an external audio input source (such as a stereo) to this jack so that you can record sound on your convertible tablet PC or play sound through your convertible tablet PC speakers.
Parallel port		Plug a parallel device (such as a printer) into this port.
Serial port		Plug a serial device (such as a digital camera) into this port.
Monitor port		Plug an analog VGA monitor or projector into this port. For more information, see "Viewing the display on a projector or monitor" on page 63 .
Ethernet jack		Plug a 10/100 Ethernet network cable into this jack.
PS/2 keyboard port		Plug a Personal System/2 (PS/2) keyboard into this port. Attaching a PS/2 keyboard to your port replicator may deactivate the built-in keyboard.
PS/2 mouse port		Plug a Personal System/2 (PS/2) mouse into this port. Attaching a PS/2 mouse to your port replicator may deactivate the touchpad.

Connecting to the port replicator

You can attach your convertible tablet PC to the port replicator while your convertible tablet PC is off, on, or in Standby mode.

Attaching to the port replicator

To attach your convertible tablet PC to the port replicator:

- 1 Make sure the docking release latch is in the fully raised position.
- 2 Align the connector holes on the bottom of your convertible tablet PC with the docking posts on the port replicator.
- 3 Press down on the docking release latch until your convertible tablet PC moves into place.



- 4 Connect external devices to the ports on the port replicator.



Important



The convertible tablet PC may detect additional devices and add drivers after being attached to the port replicator. This process must be completed for components to work correctly. Follow any on-screen instructions, if necessary.

Disconnecting from the port replicator

You can separate your convertible tablet PC from the port replicator while your convertible tablet PC is off or on (not in Standby or Hibernate mode).



To separate your convertible tablet PC from the port replicator:

- 1 If your convertible tablet PC is off, go to [Step 2](#).

-OR-

Tap or click **Start**, then tap or click **Undock Computer**. The Undock Computer menu item appears in the Start menu only while your convertible tablet PC is docked.

- 2 Pull up on the docking release latch. Your convertible tablet PC will move out and away from the port replicator.



- 3 Lift your convertible tablet PC off of the port replicator.



Securing your port replicator

You can secure your convertible tablet PC and port replicator to an object by using the security ring located on the left side of the port replicator and the Kensington lock slot located on the left side of your convertible tablet PC.

To secure your convertible tablet PC and port replicator:

- 1** Open the security ring on the port replicator.
- 2** Attach your convertible tablet PC to the port replicator.
- 3** Secure one end of the Kensington cable to a solid object, then run the other end of the cable through the security ring and lock it into the slot provided on the left side of your convertible tablet PC.



Chapter 8

Maintaining Your Convertible Tablet PC



- Caring for your convertible tablet PC
- Cleaning your convertible tablet PC
- Protecting your convertible tablet PC from viruses
- Updating Windows
- Restoring your system

Caring for your convertible tablet PC

To extend the life of your convertible tablet PC:

- Be careful not to bump or drop your convertible tablet PC, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your convertible tablet PC, we recommend that you put it in a carrying case.
- Keep your convertible tablet PC away from magnetic fields. Magnetic fields can erase data on hard drives.
- Never turn off your convertible tablet PC when the hard drive light is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your convertible tablet PC to extreme temperature changes. The case (and LCD panel) can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your convertible tablet PC is safest at temperatures that are comfortable for you.
- Keep all liquids away from your convertible tablet PC. When spilled onto convertible tablet PC components, almost any liquid can result in extremely expensive repairs that are not covered under your warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms and can lead to permanent damage to the convertible tablet PC.
- Do not block the ventilation fan slots. If these slots are blocked, your convertible tablet PC may overheat resulting in unexpected shutdown or permanent damage to the convertible tablet PC.
- When storing your convertible tablet PC for an extended period of time, unplug AC power and remove the battery after discharging it partway.

Display screen

- Use only your convertible tablet PC's pen on the display. Do not write on the surface with an ink pen or pencil.
- Nothing heavier than your writing hand should be placed on top of the display.
- Protect the display surface from unnecessary contact by turning the screen so it is in the notebook orientation and closing it when transporting the Gateway convertible tablet PC. For more information, see "[Converting the display from notebook to tablet mode](#)" on page 45.
- Never spray or pour liquids directly on the display surface.
- Avoid prolonged exposure to direct sunlight.
- Use the special cleaning cloth included with your convertible tablet PC to wipe away dust and fingerprints. Dampen the cloth with water or a mild window glass cleaner solution but never spray anything directly on the surface. If liquid collects around the edges, wipe it up immediately.

Pen

- Always store the pen in the Gateway convertible tablet PC's pen holder when not in use. For more information, see "[Right Side](#)" on page 13.
- Store extra pens horizontally in a box or drawer.
- Pens should not be stored vertically on the tip because constant tip pressure can affect pen-screen interaction.
- The pen has electronics in it, so it should not be exposed to or immersed in liquids.

Replacing the pen point

Normal use can wear down the pen's point, and also cause it to pick up abrasive particles that may scratch the display. Therefore, the pen ships with extra points and a replacement tool.

To replace the pen point:

- 1 Use the replacement tool to grab the old point and pull it out of the pen.



- 2 Insert a new point and apply slight pressure to set it in place.



Cleaning your convertible tablet PC

Keeping your convertible tablet PC clean and the vents free from dust helps keep your convertible tablet PC performing at its best. You may want to gather these items and put together a convertible tablet PC cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Cotton swabs
- A DVD drive cleaning kit

Cleaning the exterior

Warning



When you shut down your convertible tablet PC, the power turns off, but some electrical current still flows through your convertible tablet PC. To avoid possible injury from electrical shock, unplug the power cord, modem cable, and network cable from the wall outlets.

Always turn off your convertible tablet PC and other peripherals before cleaning any components. Also, remove the battery before cleaning any components.

Use a damp, lint-free cloth to clean your convertible tablet PC and other parts of your system. Do not use household abrasive or solvent cleaners because they can damage the finish on components.

Your convertible tablet PC is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your convertible tablet PC turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your convertible tablet PC.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your convertible tablet PC and turn the convertible tablet PC upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it.

Cleaning the convertible tablet PC screen

Use the special cleaning cloth included with your convertible tablet PC to wipe away dust and fingerprints. Dampen the cloth with water or a mild window glass cleaner solution but never spray anything directly on the surface.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.



Protecting your convertible tablet PC from viruses

A *virus* is a program that attaches itself to a file on a computer, then spreads from one computer to another. Viruses can damage data or cause your computer to malfunction. Some viruses go undetected for a period of time because they are activated on a certain date.

Protect your convertible tablet PC from a virus by:

- Registering your copy of Norton AntiVirus and subscribing to the virus definition update service. You received a free limited time subscription to the Norton AntiVirus service when you purchased your convertible tablet PC.
- Using the Norton® AntiVirus program to check files and programs that are attached to e-mail messages or downloaded from the Internet.
- Checking all programs for viruses before installing them.
- Disabling macros on suspicious Microsoft Word and Excel files. These programs will warn you if a document that you are opening contains a macro that might have a virus.
- Periodically updating the Norton AntiVirus program to protect against the latest viruses.
- Making sure the Windows Security Center is configured to provide you with the highest level of protection.

Tips & Tricks



For more information about modifying security settings, see "Modifying Security Settings" in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.


Help and Support




For more information about protecting your convertible tablet PC against viruses, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **viruses** in the **Search** box , then tap or click the arrow.

► To scan for viruses:

- 1 Tap or click Start, All Programs, Norton AntiVirus, then tap or click Norton AntiVirus 2004. Norton AntiVirus opens.

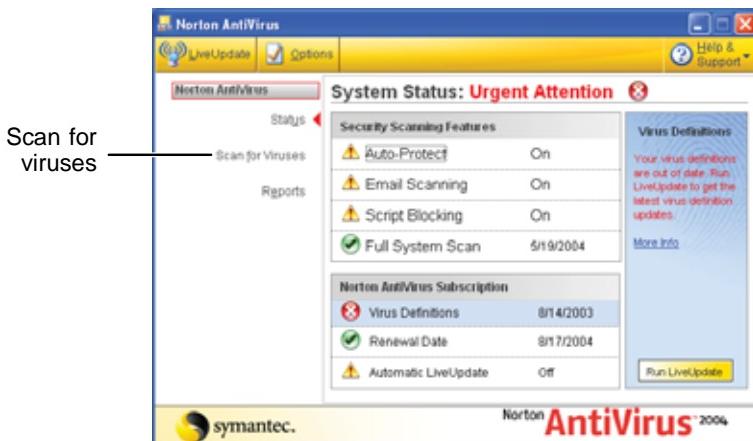

- 2 Tap or click Scan for Viruses.

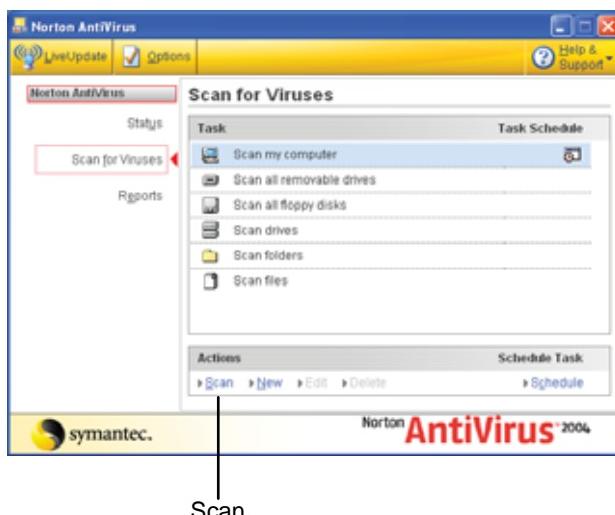

- 3 Tap or click the type of scan you want to make in the Scan for Viruses area, then under Actions, tap or click Scan.





To remove a virus:

- 1** If Norton AntiVirus finds a virus, follow all on-screen instructions to remove the virus.
- 2** Turn off your convertible tablet PC and leave it off for at least 30 seconds.
- 3** Turn on your convertible tablet PC and rescan for the virus.



To update Norton AntiVirus:

Important



You received a free limited time subscription to the Norton AntiVirus service when you purchased your convertible tablet PC. To update Norton AntiVirus after the free subscription period, you must extend your subscription.

- 1** Make sure that you are connected to the Internet.
- 2** Tap or click **Start, All Programs, Norton AntiVirus**, then tap or click **LiveUpdate - Norton AntiVirus**. The LiveUpdate wizard opens.
- 3** Follow the on-screen instructions to update your Norton AntiVirus program with the latest virus protection files.
- 4** When the program has finished, tap or click **Finish**.



Updating Windows

Windows Update is the online extension of Windows that helps you to keep your convertible tablet PC up-to-date. Use Windows Update to choose updates for your convertible tablet PC's operating system, software, and hardware. New content is added to the site regularly, so you can always get the most recent updates and fixes to protect your convertible tablet PC and keep it running smoothly. Windows Update scans your convertible tablet PC and provides you with a tailored selection of updates that apply only to the software and hardware on your convertible tablet PC.

To run Windows Update:

- 1 Connect to the Internet.
- 2 Tap or click **Start**, **All Programs**, then tap or click **Windows Update**.
- 3 Follow the on-screen instructions.



Help and Support

For more information about Windows Update in Windows XP, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **Windows Update** in the HelpSpot **Search** box , then tap or click the arrow.

Restoring your system

All programs that were preinstalled on your convertible tablet PC are available on the backup restore discs that you created with the recovery media program, on the hard drive, or on restore discs that were included with your convertible tablet PC. If you need to restore your convertible tablet PC to the original configuration, you can use the backup restore discs or you can use the backup files located on the hard drive.

The instructions for using the restore discs or hard drive backup files are included in the instruction booklet that came with your restore discs.

Chapter 9

Troubleshooting



- Troubleshooting typical hardware and software problems
- Getting telephone support
- Using automated troubleshooting systems

Safety guidelines

While troubleshooting your convertible tablet PC, follow these safety guidelines:

- Never remove the memory bay cover, keyboard, or hard drive kit if your convertible tablet PC is turned on, the batteries are installed, or while the modem cable, network cable, or AC power adapter are connected to your convertible tablet PC.
- Make sure that you are correctly grounded before accessing internal components. For more information about preventing damage from static electricity, see “[Preventing static electricity discharge](#)” on [page 80](#).
- After you complete any maintenance tasks where you remove the memory bay cover, keyboard, or hard drive kit, make sure that you replace the cover, keyboard, or hard drive kit, reinstall any screws, then replace the batteries before you start your convertible tablet PC.

Warning



Do not try to troubleshoot your problem if power cords or plugs are damaged, if your convertible tablet PC was dropped, or if the case was damaged. Instead, unplug your convertible tablet PC and contact a qualified computer technician.

First steps

If you have problems with your convertible tablet PC, try these things first:

- Make sure that the AC power adapter is connected to your convertible tablet PC and an AC outlet and that the AC outlet is supplying power.
- If you use a power strip or surge protector, make sure that it is turned on.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Customer Care in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Help and Support



For more information about troubleshooting, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **troubleshooting** in the **Search** box , then tap or click the arrow.

Troubleshooting

Troubleshooting topics are listed in alphabetical order.

Audio

Audio troubleshooting is covered under “[Sound](#)” on page 135.

Battery

Battery troubleshooting is covered under “[Power](#)” on page 133.

CD drives

CD drive troubleshooting is covered under “[DVD drives](#)” on page 120.

Device installation

You have computer problems after adding a new device

Sometimes a new device, such as a PC Card, can cause a system resource (IRQ) conflict. Check IRQ usage to determine if there is an IRQ conflict.



To check IRQ usage:

- 1 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Performance and Maintenance**.
- 2 Tap or click/Double-tap or double-click **System**, tap or click the **Hardware** tab, then tap or click **Device Manager**. The *Device Manager* window opens.
- 3 Tap or click **View**, then tap or click **Resources by type**. Double-tap or double-click **Interrupt request (IRQ)**. All IRQs and their hardware assignments are displayed.



Help and Support

For more information about IRQs, tap or click **Start**, then tap or click **Help and Support**. Type the keyword IRQs in the **Search** box , then tap or click the arrow.

**To free IRQ resources for the new device:**

- 1** In the *Device Manager* window, check the device list for a resource conflict. A resource conflict appears as a black exclamation point in a yellow circle.
- 2** Remove the device you are trying to install, then determine which one of the existing devices or ports you can disable.
- 3** Button-tap or right-click the device or port you want to disable, then tap or click **Disable**. The device or port is disabled.



Display

The screen is too dark

- Adjust the brightness using the system keys. For more information, see “[System key combinations](#)” on page 36.
- Adjust the brightness using the XtraBright/XtraDim feature. For more information, see “[XtraBright/XtraDim](#)” on page 47.

The screen resolution is not correct

Change the screen resolution from the *Display Properties* dialog box.

Tips & Tricks

For instructions on changing the screen resolution, see “[Adjusting the screen resolution](#)” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

The text on the display is dim or difficult to read

- Adjust the brightness and contrast using the system keys. For more information, see “[System key combinations](#)” on page 36.
- Change the display settings.

Tips & Tricks



For instructions on changing the display settings, see “Adjusting the screen and desktop settings” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

- Move your convertible tablet PC away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

The display has pixels that are always dark or too bright

This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway's inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Customer Care to identify whether a repair or replacement is justified based on the number of pixels affected.

DVD drives

Your convertible tablet PC does not recognize a disc

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.
- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.
- Make sure that the disc label is facing up, then try again.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your convertible tablet PC.
- Your convertible tablet PC may be experiencing some temporary memory problems. Shut down and restart your convertible tablet PC.

- Clean the disc. For more information, see “[Cleaning CDs or DVDs](#)” on page 110.

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your convertible tablet PC.
- Make sure that the volume control on your convertible tablet PC is turned up. For more information, see “[System key combinations](#)” on page 36.
- Make sure that the Windows volume control is turned up.

Tips & Tricks



For instructions on how to adjust the volume control in Windows, see “[Adjusting the volume](#)” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

- Make sure that Mute controls are turned off. For more information about the mute setting, see “[System key combinations](#)” on page 36.
- Make sure that headphones are not plugged into the headphone jack.
- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the disc. For more information, see “[Cleaning CDs or DVDs](#)” on page 110.
- Your convertible tablet PC may be experiencing some temporary memory problems. Shut down and restart your convertible tablet PC.
- Reinstall the audio device drivers. For more information, see “[Downloads](#)” on page 4.

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Shut down and restart your convertible tablet PC.
- Clean the DVD. For more information, see “[Cleaning CDs or DVDs](#)” on page 110.

- DVD discs and drives contain *regional codes* that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc's regional code and your DVD drive's regional code must match.

The regional code on your DVD drive is determined by your convertible tablet PC's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.

If the DVD movie does not play, the disc's regional code and your DVD drive's regional code may not match.

- Make sure that a DVD player program has been installed on your convertible tablet PC.

Tips & Tricks



For instructions on playing a DVD, see “[Playing a DVD](#)” on page 58.

A DVD does not produce sound on a TV

- Audio is not transmitted through the S-Video out jack. Use the built-in speakers, a set of headphones or external powered speakers, or connect your convertible tablet PC to a stereo system to hear sound while playing a DVD.

File management

A file was accidentally deleted

If a file was deleted at a DOS prompt or in Windows while holding down the **SHIFT** key, the file cannot be restored.



To restore deleted files:

- Double-tap or double-click the **Recycle Bin** icon.
- Button-tap or right-click the file you want to restore, then tap or click **Restore**. The file is restored to the place where it was originally deleted from.

If the Recycle Bin was emptied before you tried to restore a file, the file cannot be restored.



Help and Support



For more information about restoring deleted files, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **System Restore** in the **Search** box , then tap or click the arrow.

Search

Hard drive

You see an “Insufficient disk space” error message

- Delete unnecessary files from the hard drive using Disk Cleanup.

Tips & Tricks



For instructions on deleting unnecessary files, see “Using Disk Cleanup” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

- Empty the Recycle Bin by button-tapping or right-clicking the **Recycle Bin** icon, then tapping or clicking **Empty Recycle Bin**.

Caution



All deleted files will be lost when you empty the Recycle Bin.

- Save your files to another drive. If the hard drive is full, copy any files not regularly used to backup media, then delete them from the hard drive.

Help and Support



For more information about file management, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **file management** in the **Search** box , then tap or click the arrow.

Search

You see a “Data error” message

This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program.

Tips & Tricks



For instructions on fixing hard drive problems, see “Checking the hard drive for errors” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

The hard drive cannot be accessed, or you see a “General failure reading drive C” error message

- Make sure that the hard drive is installed correctly. Remove it, firmly reinsert it, then restart your convertible tablet PC. For more information, see “[Replacing the hard drive kit](#)” on page 93.
- If your convertible tablet PC has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

Internet

You cannot connect to the Internet

- If you are using a dial-up modem, make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See “[Right Side](#)” on page 13 or “[Back](#)” on page 100 to make sure that the connections have been made correctly.

-OR-

If you are using a cable or DSL modem, make sure that the modem cable is plugged into the Ethernet network jack and not the modem jack. See “[Back](#)” on page 14 or “[Back](#)” on page 100 to make sure that the connections have been made correctly.

- Make sure that you do not have a problem with your modem. For more information, see “[Modem \(dial-up\)](#)” on page 127.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.

Help and Support



For more information about troubleshooting Internet connections, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **troubleshooting connections** in the **Search** box  , then tap or click the arrow.

You see an “Unable to locate host” message and are unable to browse the Internet

This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

Many factors can affect Internet performance:

- The condition of the telephone lines in your residence or at your local telephone service
- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your convertible tablet PC

People are sending you e-mail messages, but you have not received any mail

- Tap or click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Keyboard

The built-in keyboard does not work

- Attaching a PS/2 keyboard to your port replicator while your convertible tablet PC is running may deactivate the built-in keyboard.

The external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.

- Remove all extension cables and switchboxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your convertible tablet PC and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

A keyboard character keeps repeating or you see a “Keyboard stuck” or “Key failure” error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your convertible tablet PC.

You are pressing a letter key and a number appears on the screen

- The numeric keypad is turned on. See “[System key combinations](#)” on page 36 for instructions on turning off your numeric keypad.

Memory

You see a “Memory error” message

- Make sure that the memory modules are inserted correctly in the memory bay slots. For more information, see “[Adding or replacing memory](#)” on page 81.
- Use a third-party diagnostic program to help determine if a memory module is failing.

You see a “Not enough memory” error message

Close all programs, then restart your convertible tablet PC.

Help and Support



For more information about troubleshooting memory errors, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **memory error** in the **Search** box , then tap or click the arrow.

Memory card reader

Drive letter for the memory card slot does not appear in the My Computer window

- Reboot your convertible tablet PC.

Modem (dial-up)

Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See “[Right Side](#)” on page 13 to make sure that the connections have been made correctly.
- Make sure that your convertible tablet PC is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.



To check the dialing properties:

- 1 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Printers and Other Hardware**.
- 2 Tap or click/Double-tap or double-click the **Phone and Modem Options** icon, then tap or click the **Dialing Rules** tab.
- 3 Tap or click the location from which you are dialing, then tap or click **Edit**.

4 Make sure that all settings are correct.



Help and Support



For more information about dialing properties, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **dialing** in the **Search** box , then tap or click the arrow.

- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.

- Review the troubleshooting information under “[Internet](#)” on [page 124](#).

Your 56K modem does not connect at 56K

Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your convertible tablet PC has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your convertible tablet PC has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your convertible tablet PC

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your convertible tablet PC. See “[Right Side](#)” on [page 13](#) to make sure that the connections have been made correctly.
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use the modem cable that came with your convertible tablet PC. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your convertible tablet PC.
- Run Windows modem diagnostics.



To run modem diagnostics:

- 1 Close all open programs.
- 2 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Printers and Other Hardware**.

- 3 Tap or click/Double-tap or double-click the **Phone and Modem Options** icon, then tap or click the **Modems** tab.
- 4 Tap or click your modem, then tap or click **Properties**. The *Modem Properties* dialog box opens.
- 5 Tap or click the **Diagnostic** tab, then tap or click **Query Modem**. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open* or *the modem has failed to respond*, the modem did not pass diagnostics.



Help and Support



For more information about modem troubleshooting, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **modem troubleshooting** in the **Search** box , then tap or click the arrow.

Search 

The modem is noisy when it dials and connects

When your modem tries to connect to another modem, it begins *handshaking*. Handshaking is a digital “getting acquainted” conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.



To turn down the modem volume:

- 1 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Printers and Other Hardware**.
- 2 Tap or click/Double-tap or double-click the **Phone and Modem Options** icon, then tap or click the **Modems** tab.
- 3 Tap or click the modem you want to adjust, then tap or click **Properties**.
- 4 Tap or click the **Modem** tab, then adjust the **Speaker volume** control.

- 5** Tap or click **OK** twice to close the *Phone and Modem Options* dialog box.



Mouse

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your convertible tablet PC.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse.
- Some mouse pad patterns “confuse” optical mice. Try the mouse on a different surface.

Networks

You cannot connect to your company network

Every network is unique. Contact your company computer department or network administrator for help

Tips & Tricks



For information about setting up a network in your home, see the network guide which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

Help and Support



For more information about network troubleshooting, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **network troubleshooting** in the **Search** box , then tap or click the arrow.

Passwords

Your convertible tablet PC does not accept your password

Make sure that CAPS LOCK and NUM LOCK are turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your convertible tablet PC for repair. Call Gateway Customer Care for instructions.

PC Cards

You installed a PC Card and now your convertible tablet PC is having problems

- Make sure that you have correctly installed required software for the PC Card. For more information, see your PC Card's documentation.
- Make sure that the PC Card you installed is not causing a system resource conflict. For more information on resource conflicts, see "[Device installation](#)" on page 118.

Pen

The convertible tablet PC does not respond to the pen

- You are not using the correct pen. Use only Penabled digitizer pens by Wacom such as your convertible tablet PC's pen. The convertible tablet PC does not respond to some other tablet pens or plastic pens.

The pen tip does not line up with the pointer when you tap the screen

- The pen and display need recalibrating in both Landscape and Portrait mode. Recalibrate through the **Pen Settings** tab of the *Tablet and Pen Settings* dialog box.

Tips & Tricks

For instructions on recalibrating pen settings, see “Adjusting tablet and Pen Settings” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start, All Programs**, then tap or click **Gateway Documentation**.

Power

Your convertible tablet PC is not working on AC power

- Make sure that your AC power adapter is connected correctly to your convertible tablet PC. For more information, see “[Connecting the AC adapter](#)” on page 24.
- If your convertible tablet PC is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your convertible tablet PC is not working on battery power

- Make sure that the battery is installed correctly. For more information, see “[Changing batteries](#)” on page 73.
- Make sure that the battery is fully recharged. For more information, see “[Recharging the battery](#)” on page 71.
- Make sure that the battery is calibrated correctly. For more information, see “[Recalibrating the battery](#)” on page 72.

Printer

The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

The printer is on but will not print

- Check the cable between the printer and your convertible tablet PC. Make sure that it is connected to the correct port.

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- Check the port and cable for bent or broken pins.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.



To set a default printer:

- 1 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Printers and Other Hardware**.
- 2 Tap or click/Double-tap or double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- 3 Button-tap or right-click the name of the printer you want to be the default printer, then tap or click **Set as Default Printer**.



- Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a “Printer queue is full” error message

- Make sure that the printer is not set to work offline.



To make sure that the printer is not set to work offline:

- 1 Tap or click **Start**, then tap or click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, tap or click **Printers and Other Hardware**.
- 2 Tap or click/Double-tap or double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- 3 Button-tap or right-click the name of the printer you want to use. If the menu shows a check mark next to **Use Printer Offline**, tap or click **Use Printer Offline** to clear the check mark.



Help and Support

For more information about printer troubleshooting, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **printer troubleshooter** in the **Search** box , then tap or click the arrow.

Search

- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a “Printer is out of paper” error message

After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack.
- Make sure that the volume control on your convertible tablet PC is turned up. For more information, see “[System key combinations](#)” on [page 36](#).
- Make sure that the Windows volume control is turned up.

Tips & Tricks

For instructions on how to adjust the volume control in Windows, see “Adjusting the volume” in *Using Your Tablet PC* which has been included on your hard drive. To access this guide, tap or click **Start**, **All Programs**, then tap or click **Gateway Documentation**.

- Make sure that Mute controls are turned off. For more information about the mute setting, see “[System key combinations](#)” on [page 36](#).

Help and Support

For more information about troubleshooting sound issues, tap or click **Start**, then tap or click **Help and Support**. Type the keyword **sound troubleshooter** in the **Search** box , then tap or click the arrow.

Search

Touchpad

The touchpad does not work.

Attaching a PS/2 mouse to your port replicator may deactivate the touchpad.

Video

The projector or external monitor is not working

- Make sure that you have pressed FN+F3 to activate the external monitor option.
- Make sure that the monitor is turned on and that the video cable is connected correctly.

TV out is not working

- Make sure that you have activated TV out. For more information, see ["Viewing the display on a television" on page 67](#).
- Make sure that the television is turned on and that the S-Video cable is connected correctly.
- Televisions in different countries use different standards. If you are traveling, you may need to change the TV Out mode. For more information, see ["Viewing the display on a television" on page 67](#).

Telephone support

Before calling Gateway Customer Care

If you have a technical problem with your convertible tablet PC, follow these recommendations before contacting Gateway Customer Care:

- Make sure that your convertible tablet PC is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.

Warning



To avoid bodily injury, do not attempt to troubleshoot your convertible tablet PC problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your convertible tablet PC
- Your convertible tablet PC was dropped
- The case was damaged

Instead, unplug your convertible tablet PC and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your convertible tablet PC is nearby at the time of your call. The technician may have you follow troubleshooting steps.

Telephone numbers

Gateway offers a wide range of customer service, customer care, and information services.

Automated troubleshooting system

Service description	How to reach
Use an automated menu system and your telephone keypad to find answers to common problems.	800-846-2118

Telephone numbers

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach
Gateway's fee-based software tutorial service	Get tutorial assistance for software issues billed by the minute.	800-229-1103 (charged to your credit card) 900-555-4695 (charged to your telephone bill)
Gateway Customer Care	Talk to a Gateway Customer Care representative about a non-tutorial technical support question. (See “Before calling Gateway Customer Care” on page 137 before calling.)	Gateway Customer Care telephone numbers vary by country or region. For the correct telephone number, see your setup poster or the Gateway eSupport Web site at support.gateway.com . For more information, see “Using eSupport” on page 3.
America Online	Get support for your America Online ISP account	800-827-6364 (US) 888-265-4357 (Canada)
Sales, accounting, and warranty	Get information about available systems, pricing, orders, billing statements, warranty service, or other non-technical issues.	800-846-2000 (US) 888-387-7752 (Canada)

Appendix A

Safety, Regulatory, and Legal Information



- Safety information
- Regulatory statements
- Notices

Important safety information

Your Gateway system is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.

Warning



Always follow these instructions to help guard against personal injury and damage to your Gateway system.

Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable work surface.
- The product should be operated only from the type of power source indicated on the rating label.
- If your convertible tablet PC has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- Openings in the convertible tablet PC case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for ventilation when you set up your work area. Never insert objects of any kind into the convertible tablet PC ventilation openings.
- Some products are equipped with a three-wire power cord to make sure that the product is properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your system is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and buildup of static charges.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- Some products have a replaceable CMOS battery on the system board. There is a danger of explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of batteries according to the manufacturer's instructions.

- When the convertible tablet PC is turned off, a small amount of electrical current still flows through the convertible tablet PC. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not operate properly when the operating instructions are followed.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Warning



Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

Regulatory compliance statements

Wireless Guidance

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your convertible tablet PC system. These devices may operate in the 2.4 GHz (i.e. 802.11B/G LAN & Bluetooth), 5.2 GHz (i.e. 802.11A LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your convertible tablet PC is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your convertible tablet PC) emit less

energy than is allowed in radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

Measurements have been performed to show that the RF exposure is below what is considered safe limits; however care should be taken to make sure the user or bystanders keep the transmitter away from their body when the wireless device is transmitting. The transmitting antenna installed in the top third of the lid should be used in a manner to maintain 20 cm (8 inches) from user's or bystander's bodies.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices. Examples of common restrictions are listed below:

Warning



Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. 802.11B (also known as wireless Ethernet or Wifi) and Bluetooth communication devices are examples of devices that provide wireless communication.

Warning



In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.

Warning



If your system came equipped with an internal embedded wireless device, do not operate the wireless device unless all covers and shields are in place and the system is fully assembled.

Caution



Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Please contact Gateway for service.

Caution

Only use drivers approved for the country in which the device will be used. See the Gateway System Restoration Kit, or contact Gateway Customer Care for additional information.

Important

Every country has different restrictions on the use of wireless devices. Since your system is equipped with a wireless device, when traveling between countries with your system, check with the local Radio Approval authorities prior to any move or trip for any restrictions on the use of a wireless device in the destination country.

United States of America

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your convertible tablet PC system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.

The FCC has set a general guideline of 20 cm (8 inches) separation between the device and the body, for use of a wireless device near the body (this does not include extremities). This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your convertible tablet PC, is well below the RF exposure limits as set by the FCC.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Caution

Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Caution

The transmitting device embedded in this system may not be used with any antenna other than the one provided with the system.

Caution



In order to comply with FCC requirements this transmitter must not be operated (or co-located) in conjunction with any other transmitter or antenna installed in the convertible tablet PC.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance Accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity

Responsible party:

Gateway Companies, Inc.
610 Gateway Drive, North Sioux City, SD 57049
(605) 232-2000 Fax: (605) 232-2023

Product:

- Gateway M275

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution



Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.

California Proposition 65 Warning

Warning



This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or reproductive harm.

Mercury Warning

Warning



The lamp in this display contains mercury. Do not put in the trash. Recycle or dispose as hazardous waste.

Telecommunications per Part 68 of the Code of Federal Regulations (CFR 47) (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Code of Federal Regulations (CFR 47) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

A telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and

the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada

Industry Canada (IC) Intentional emitter per RSS 210

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your convertible tablet PC system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.

As a general guideline, a separation of 20 cm (8 inches) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your convertible tablet PC, is well below the RF exposure limits as set by Industry Canada.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Caution



To prevent radio interference to licensed service or co-channel Mobile Satellite systems, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Caution



Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

Caution



The transmitting device embedded in this system may not be used with any antenna other than provided with the system.

Caution



The 802.11A radio LAN your system may have been equipped with operates in the same frequency range as high power radar, which has priority use, and may damage the radio LAN if both are present and being used in the same area.

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Warning



To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

The **Ringer Equivalence Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Laser safety statement

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

Warning



Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

EPA ENERGY STAR



As an ENERGY STAR® Partner, Gateway has determined that this product meets the ENERGY STAR guidelines for energy efficiency when used with a computer equipped with a Display Power Management System.

Notices

Copyright © 2004 Gateway, Inc.
All Rights Reserved
14303 Gateway Place
Poway, CA 92064 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

Gateway and the Black-and-White Spot Design are trademarks or registered trademarks of Gateway, Inc. in the U.S. and other countries. SpotShop, Spotshop.com, and Your:)Ware are trademarks of Gateway, Inc. Intel, Intel Inside logo, and Pentium are registered trademarks and MMX is a trademark of Intel Corporation. Microsoft, MS, MS-DOS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

Macrovision statement

If your convertible tablet PC has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A

AC adapter
connecting 24
connector 14, 100
international adapters 77
AC-3 digital audio jack 100
accessories
purchasing 21
safety precautions 141
airplane power adapter 21
application key 34, 35
arrow keys 34, 35
audio
adjusting volume 37
digital jack 100
headphone jack 12, 100
microphone jack 12, 100
muting 37, 50
troubleshooting 135
volume down button 37
volume up button 37
audio CD
cleaning 110
playing 58
automobile power adapter 21, 77

B

battery
alternate power sources 77
bay 15, 74
changing 74
charge indicator 25, 32, 71
charge status 70
charging 24, 71
conserving power 76
icons 70
installing 74
latch 15
managing power 76

monitoring charge 70
purchasing 21
recalibrating 72
recharging 24, 71
release latch 15
replacing 74
bays
battery 15, 74
DVD drive 10, 54, 120
DVD/CD-RW drive 10, 54, 120
hard drive 15
memory 15, 81
module 10, 54, 120
recordable DVD drive 10, 54, 120
BIOS Setup utility 28, 72
break system key 37
brightness
adjusting 36, 47
system keys 34, 37
buttons
Screen Rotation 38
Tablet Input Panel 38
Windows Security 30, 39
XtraBright/XtraDim 36, 39, 47
button-tapping 48

C

cable lock
convertible tablet PC 11, 13, 98
port replicator 104
calibrating 50, 132
Caps Lock indicator 33
cards
adding memory card 60
inserting memory card 60
inserting PC Card 61
installing memory card 60
memory card slots 11

PC Card slot 11
removing memory card 60
removing PC Card 61
replacing memory card 60
slots 59, 61
troubleshooting memory card 127
troubleshooting PC Card 132
carrying case 21
CD
 cleaning 110
 inserting 57
 playing audio 58
cellular telephone memory cards 59
Certificate of Authenticity 19
changing bay modules 54
cleaning
 audio CD 110
 case 109
 CD 110
 convertible tablet PC exterior 109
 convertible tablet PC screen 110
 DVD 110
 keyboard 110
 LCD panel 110
 screen 110
clicking 42, 48
closing unresponsive program 30
connecting
 AC adapter 24
 external keyboard 34
 external monitor 63
 keyboard 34
 port replicator 102
 projector 63
 PS/2 keyboard 101
 PS/2 mouse 101
connections
 AC-3 digital audio 100
 audio 12, 100
 digital audio 100
digital camera 14, 99, 100
digital video camera 11
diskette drive 14, 99, 100
docking 14, 98
docking station 98
Ethernet 14, 101
external audio 12, 101
external speakers 12, 100
Firewire 11
flash drive 14, 99
headphone 12, 100
i.Link 11
IEEE 1394 11
keyboard 14, 99, 100, 101
line in 101
microphone 12, 100
modem 13
monitor (VGA) 14, 63, 101
mouse 14, 99, 100, 101
network 14, 101
parallel 101
port replicator 14, 98
power 14, 24, 100
printer 14, 99, 100, 101
projector 14, 63, 101
PS/2 101
PS/2 keyboard 101
PS/2 mouse 101
S/PDIF digital audio 100
scanner 14, 99, 100
serial 101
speaker 12, 100
S-Video (TV) out 65, 100
Toslink digital audio 100
USB 14, 99, 100
VGA 14, 63, 101
video camera 11
Zip drive 14, 99, 100
copyright notice 149
Customer Service
 Accounting 138
 Sales 138

Warranty 138

D

default printer 133
digital audio S/PDIF jack 100
digital camera
 serial port 101
 USB port 14, 99, 100
digital video camera
 IEEE 1394 port 11
directional keys 35
display
 adjusting brightness 46
 brightness 47
 changing orientation 46
 maintaining 107
 orientation 46
 properties 63
 switching 36
 troubleshooting 119
 using 44
docking port 14, 98
docking release latch 98
documentation
 Gateway Web site 3
 help 5
 Help and Support 5
 online help 7
 Using Your Tablet PC 6
double-clicking 43, 48
double-tapping 48
dragging 43
drivers
 updating 3
drives
 changing modular drives 54
 DVD 10, 56
 DVD/CD-RW 10, 56
 hard drive 15, 93
 identifying drive types 56
 installing and replacing 54
 recordable DVD 56

replacing hard drive 93
status indicators 32
troubleshooting 120, 123
types 56

DVD

cleaning 110
drive 56
inserting 57
playing 58, 65
troubleshooting 120

DVD drive

identifying 56
locating 10
replacing drive module 54
status indicator 32
troubleshooting 120
using 56

DVD/CD-RW drive

See DVD drive

DVD±R/±RW drive

See DVD drive

E

electrostatic discharge (ESD) 80
e-mail button 40
EmPower power adapter 77
eSupport
 getting specifications 20
 using 3
Ethernet jack 14, 101
external audio jack 101
external monitor 14, 36, 101
EZ Pad touchpad
 See touchpad

F

fan 14
faxes
 troubleshooting 129
files
 opening 43
 troubleshooting 122

finding
 Help and Support topics 6
 specifications 20
Firewire port 11
Fn key 34, 35, 36
folders
 opening 43
function keys 34, 35

G

Gateway
 eSupport 20
 model number 15, 18
 serial number 19, 20
 Web address 3
 Web site 3

H

hard drive
 bay 15
 installing 93
 replacing 93
 status indicator 32
 troubleshooting 123
headphone jack 12, 100
help
 button 40
 online 7
 using 5
Help and Support
 searching 6
 starting 5
 using 5
Hibernate mode 77
hot-swapping 61

I
i.Link port 11
IEEE 1394 port 11
indicators
 See status indicators
inkjet printer 22

installing
 battery 74
 bay modules 54
 devices 118
 drives 54
 DVD drive 54
 DVD/CD-RW drive 54
 hard drive 93
 memory 81
 PC Card 61
 recordable DVD drive 54
Internal wireless label 19
Internet
 button 40
 troubleshooting 124, 128
IRQ conflicts 118

J

jacks
 See connections

K

Kensington cable lock
 lock slot 11, 13, 98
 port replicator 104
key combinations 36
keyboard
 buttons 34
 cleaning 110
 connecting 34
 features 34
 locating 17
 PS/2 port 101
 troubleshooting 125
 USB port 14, 99, 100

keys
 application 34, 35
 arrow 34, 35
 battery status 36
 Break 37
 brightness 34, 35, 37
 directional 35

Fn 34, 35, 36
function 35
LCD brightness 35, 37
LCD/CRT 36
navigation 34, 35
Pad Lock 37
Pause 37
power status 36
Scroll Lock 37
Standby 36
Status 36
system 34, 35
system key combinations 36
toggle display 36
volume control 35
Windows 34, 35
wireless network 36

L

label
internal wireless 19
model number 15
serial number 19
wireless networking 19
laser printer 22
latch
battery 15
docking release 98
LCD panel release 10
pen 15, 49
LCD brightness system keys 35
LCD panel
cleaning 110
release latch 10
switching display 36
troubleshooting 119
LCD/CRT system key 36
lights
See status indicators
line in jack 101
lock
Kensington cable 11, 13, 98

M

maintenance
cleaning 109, 110
cleaning convertible tablet PC
screen 110
general guidelines 107
pen 107
screen 107
virus protection 111
Windows Update 114
memory
adding 81, 85
bay 15
installing 81, 85
purchasing 21
removing 81, 82, 85
replacing 81, 85
troubleshooting 126
upgrading 81, 85
memory card reader
locating 11
memory card types supported 59
status indicator 32
using 59
microphone
built-in 16
jack 12, 100
Microsoft Certificate of Authenticity
19
model number 18
modem
jack 13
troubleshooting 127
modular bay
latch 54
locating 10
lock screw 54
release latch 54
See also bays
monitor
adding external 63
color quality 64

- display properties 63
port 14, 101
screen resolution 64
- mouse
PS/2 port 101
troubleshooting 131
USB port 14, 99, 100
- moving
pointer 42
screen objects 43
- MP3 player memory cards 59
- multi-function buttons 17, 40
- multimedia
adjusting volume 50
creating CD 59
creating DVD 59
playing CD 58
playing DVD 58
using DVD drive 56
using Windows Media Player 58
- muting sound 37, 50
- My Computer button 40
- N**
- navigation keys 34, 35
- network
jack 14, 101
troubleshooting 131
- networking
internal wireless label 19
turning off wireless network 36, 51
turning on wireless network 36, 51
- non-technical support
Accounting 138
Sales 138
Warranty 138
- Norton Antivirus 111
- NTSC/PAL jack 65
- numeric keypad
status indicator 33
- using 34
- O**
- online help
button 40
using 5, 7
- opening
convertible tablet PC 10
files 43
folders 43
LCD panel 10
programs 43
shortcut menu 43
- option bays
changing modules 54
- orientation
changing 46
- P**
- Pad Lock
status indicator 33, 37
system key 37
- parallel port 101
- password 132
- pause text scrolling 37
- PC Card
adding 61
eject button 61
inserting 61
installing 61
removing 61
slot 61
troubleshooting 132
- PCMCIA card
See PC Card
- PDA memory cards 59
- pen
button 50
calibrating 50, 132
care 107
latch 15, 49
locating 13

- release latch 15
- replacing point 107
- troubleshooting 132
- using 44, 48
- peripheral devices
 - purchasing 21
- playing
 - audio CD 58
 - DVD 58
- pointer
 - moving 42
- port replicator
 - attaching convertible tablet PC 102
 - docking port 14, 98
 - release latch 98
 - separating convertible tablet PC 103
 - using 21, 97
- ports
 - See* connections
- power
 - AC adapter 24, 77
 - automobile/airplane adapter 77
 - battery 30, 70, 71, 72, 74, 76
 - button 12, 36
 - changing modes 78
 - connector 14, 24, 100
 - conserving battery power 76
 - EmPower adapter 77
 - extending battery life 76
 - Hibernate mode 77
 - indicator 28, 32
 - management 69, 76
 - source problems 26
 - Standby mode 28, 77
 - Standby/Resume 36
 - status box 36
 - status indicator 32
 - troubleshooting 133
 - turning off convertible tablet PC 29
 - turning on convertible tablet PC 26
- power adapter
 - airplane 21
 - automobile 21
- printer
 - default 133
 - inkjet 22
 - laser 22
 - parallel port 101
 - troubleshooting 133
 - USB port 14, 99, 100
- programs
 - closing unresponsive 30
 - opening 43
- projector
 - adding 63
 - color quality 64
 - display properties 63
 - screen resolution 64
- PS/2 port 101

R

- RAM
 - See* memory
- rebooting convertible tablet PC 30
- recalibrating battery 72
- recharging battery 71
- recordable DVD drive
 - See* DVD drive
- replacing
 - See* installing
- reset hole
 - location 15
 - using 30
- resetting convertible tablet PC 30
- restarting convertible tablet PC 30
- restoring system 114
- right-clicking 43, 48
- rocker switch
 - locating 41
 - using 42

S

- S/PDIF digital audio jack 100
- safety
 - caring for convertible tablet PC 106
 - general precautions 140
 - guidelines for troubleshooting 116
 - static electricity 80
- scanner
 - USB port 14, 99
- screen
 - resolution 64
 - troubleshooting 119, 136
- screen objects
 - getting information 43
 - moving 43
 - selecting 42
- Screen Rotation button 38
- Scroll Lock
 - status indicator 33, 37
 - system key 37
- searching in Help and Support 6
- security features
 - Kensington cable lock 11, 13, 98
 - Kensington lock ring 104
- serial number 19, 20
- serial port 101
- setting up
 - safety precautions 140
- shortcut menus
 - accessing 43
- shortcuts
 - buttons 40
 - opening menu 43
- shutting down convertible tablet PC 29, 30
- SO-DIMM
 - See* memory
- sound
 - adjusting 37, 50
- controls 35, 50
- muting 37, 50
- troubleshooting 135
- speakers
 - built-in 12, 13
 - jack 12, 100
- specifications 20
- speech recognition 50
- Standby
 - mode 28, 36, 78
 - system key 36
- starting
 - convertible tablet PC 26
 - programs 43
- static electricity 80
- status indicators
 - battery charge 32, 71
 - Caps Lock 33
 - drive activity 32
 - DVD drive 32
 - DVD/CD-RW drive 32
 - hard drive 32
 - location 14, 16, 17
 - memory card reader 32
 - numeric keypad 33, 37
 - Pad Lock 33, 37
 - power 32
 - recordable DVD drive 32
 - Scroll Lock 33, 37
- surge protector 26
- Suspend 36
- S-Video (TV) out jack
 - locating 100
 - using 65
- system identification label 15, 18
- system keys
 - combinations 36
 - key types 35
 - locating 34
- system restore 114

T

tablet control buttons
 locating 16
 Screen Rotation 38
Tablet Input Panel 38
Windows Security 39
XtraBright/XtraDim 39
Tablet Input Panel
 button 38
 using 50
tapping 48
technical support
 automated troubleshooting 138
 eSupport 20
 Technical Support 138
 tips before contacting 137
 tutorial service 138
telephone support 137
television
 playing DVD on 65
 TV out jack 65
 viewing display on 65
Toslink digital audio jack
 locating 100
touchpad
 buttons 41, 42
 clicking 42
 double-clicking 43
 dragging screen objects 43
 locating 17
 moving pointer 41, 42
 moving screen objects 43
 opening files, folders, and
 programs 43
 opening shortcut menu 43
 right-clicking 43
 rocker switch 41, 42
 selecting screen objects 42
 troubleshooting 136
troubleshooting
 audio 135
 automated system 138

device installation 118
display 119
DVD drive 120
faxes 129
files 122
general guidelines 117
hard drive 123
Internet connection 124, 128
IRQ conflict 118
keyboard 125
LCD panel 119
memory 126
memory card reader 127
modem 127
mouse 131
network 131
passwords 132
PC Cards 132
power 133
printer 133
safety guidelines 116
screen 119, 136
screen area 119
screen resolution 119
sound 135
technical support 137
telephone support 137
touchpad 136
video 136
Web site connection speed 125

turning off
 convertible tablet PC 29, 30
 wireless network 51
turning on
 convertible tablet PC 26
 wireless network 51
TV out (S-Video out) jack
 locating 100
 using 65

U

undocking 103

updating
device drivers 3
Norton AntiVirus 111
Windows 114
upgrading 79
USB port 14, 99, 100

turning on 36, 51
writing 44

X

XtraBright/XtraDim button 36, 39,
47

Z

Zip drive
USB port 14, 99

V

VGA port 14, 63
video
playing 58
S-Video out jack 100
troubleshooting 136
virus
protecting against 111
removing 111

volume
adjusting 37, 50
adjusting modem 130
controls 35, 50
muting 37, 50
system keys 34, 37
troubleshooting 135

W

waking up convertible tablet PC 28

Web browser button 40

Web site
Gateway 3

Windows
key 34, 35
Product Key Code 19
restoring 114
updating 114

Windows Media Player 58

Windows Security button 30, 39

Windows Security Center
using 111

wireless network
key 36
label 19
turning off 36, 51

NSK DWL M275 USR GDE R1 09/04



9528977